



// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //  
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


## FURO A18

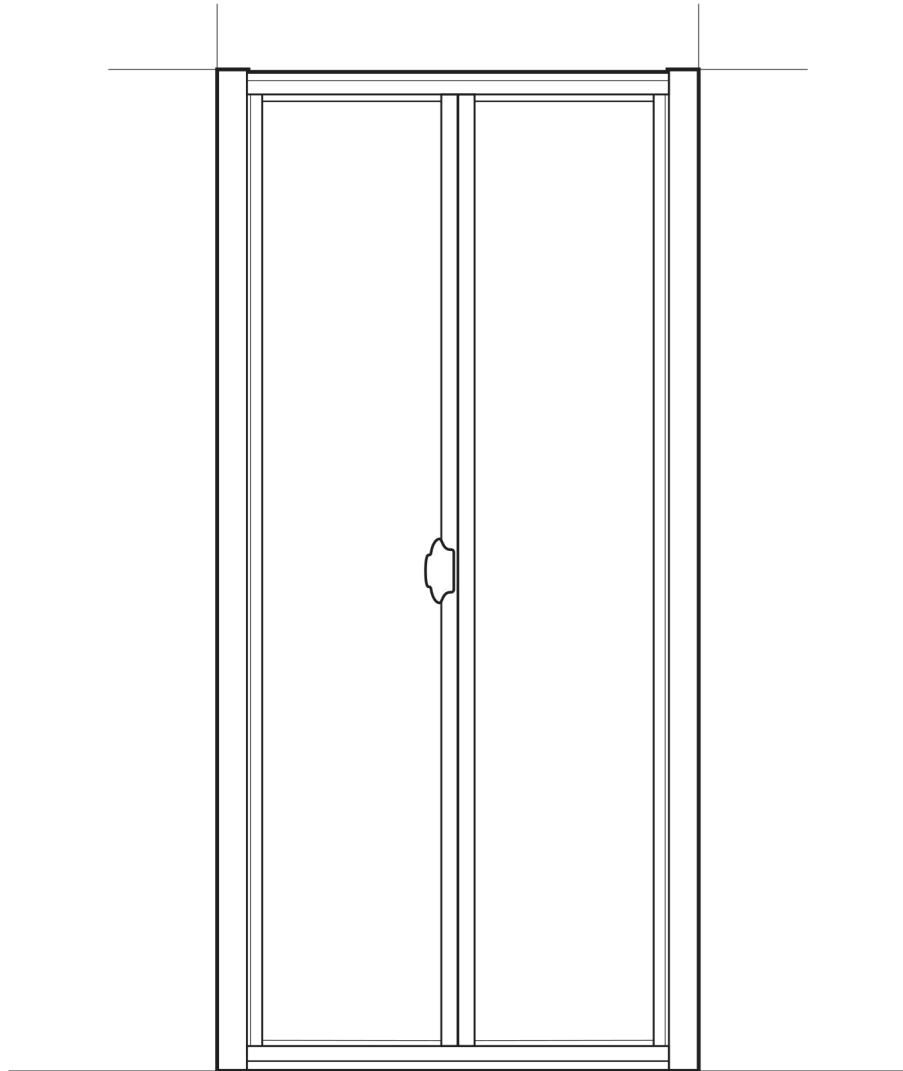



**A**

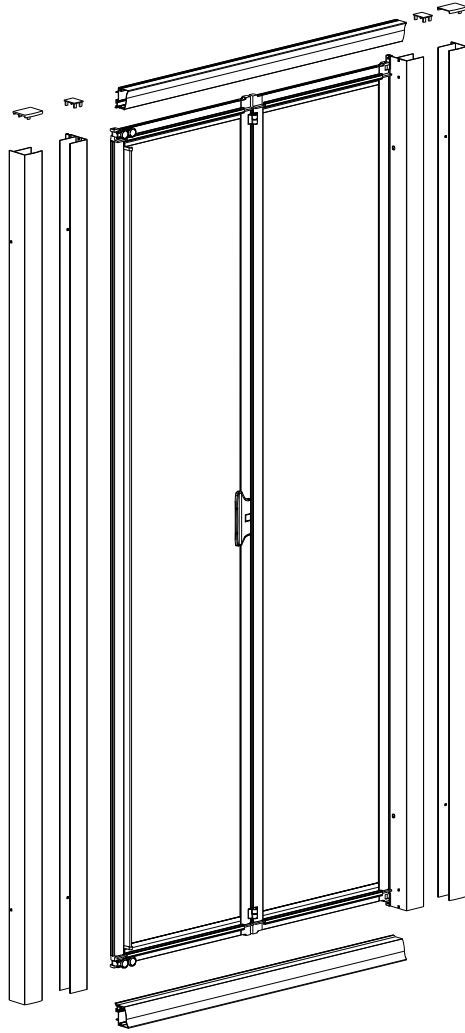



**B**

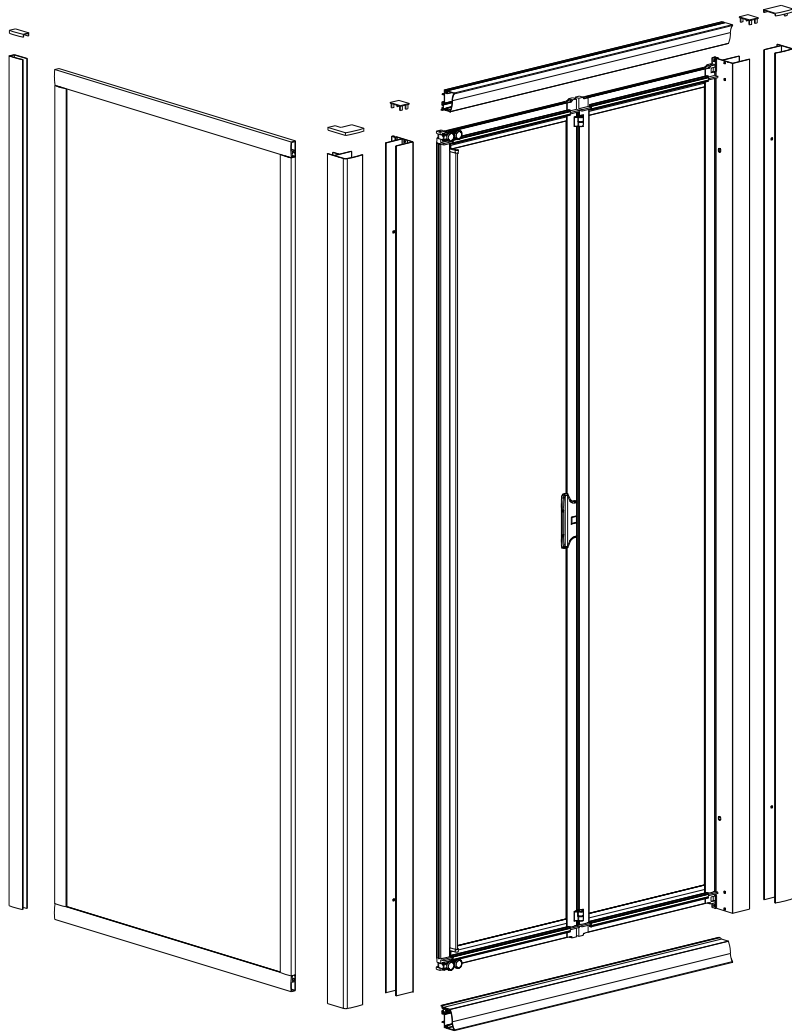

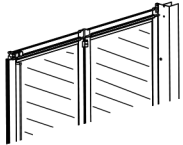M-01  1

M-03  2

M-05  1


M-07  2


M-09   $\varnothing 6$  4

M-11  3,5x16 4

M-13  4

# A

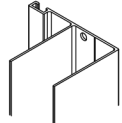M-02  1


M-04  2


M-06  1


M-08  DIN 7981 4,2x32 4

M-10  DIN 7981 4,2x22 8

M-12  8

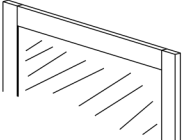
M-21  1


M-23  1

M-25  1


M-27  3,5x16 4



# B

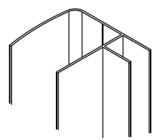M-22  1


M-24  1

M-26  2




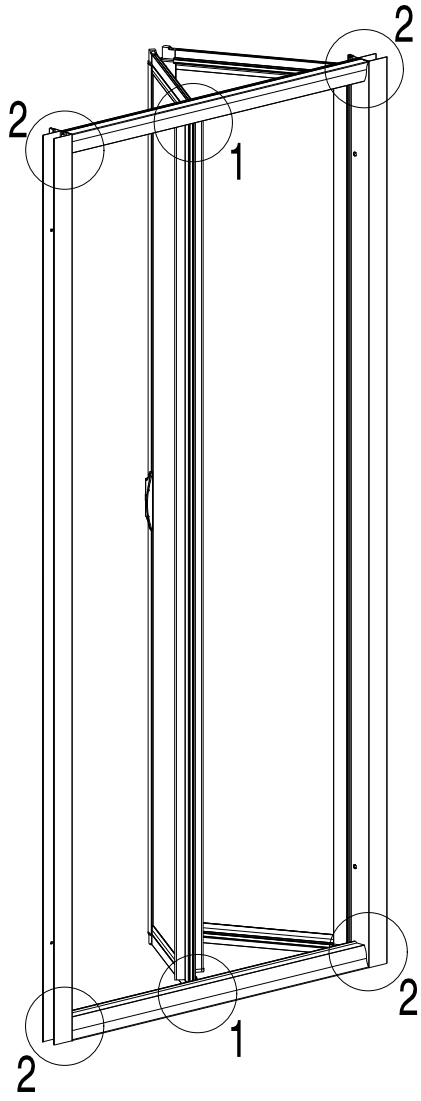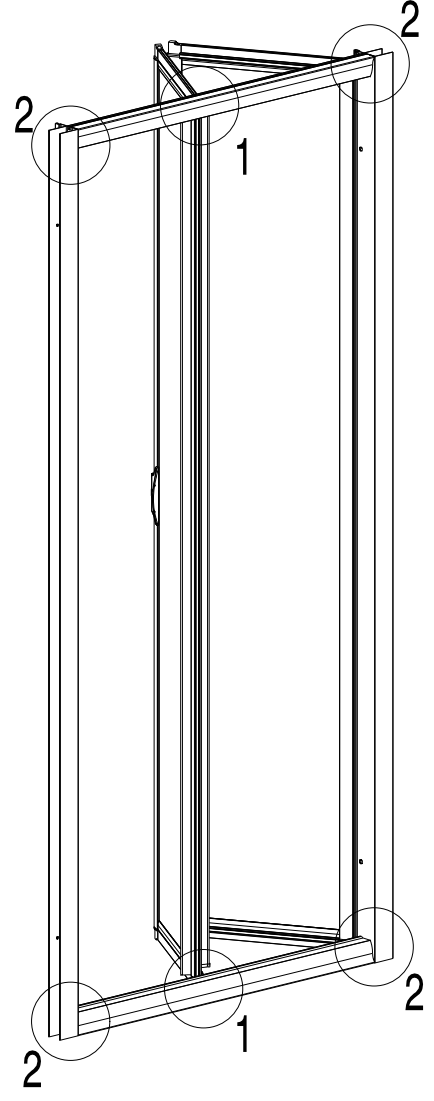
**A****B**

1

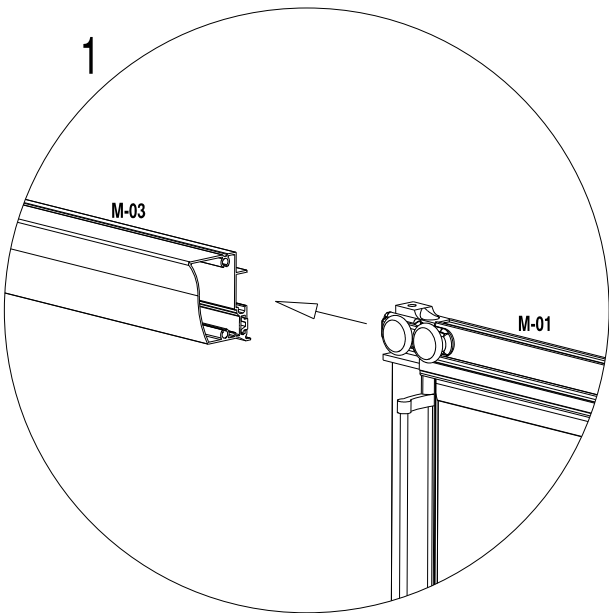


2


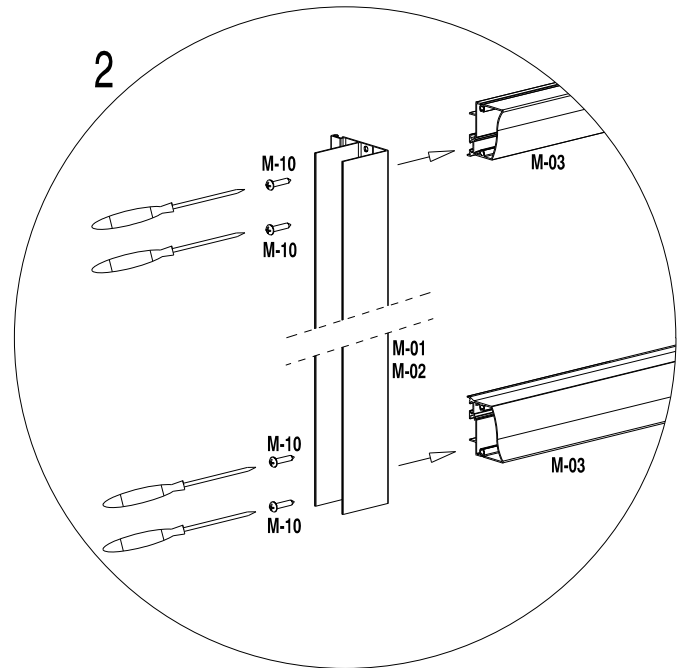


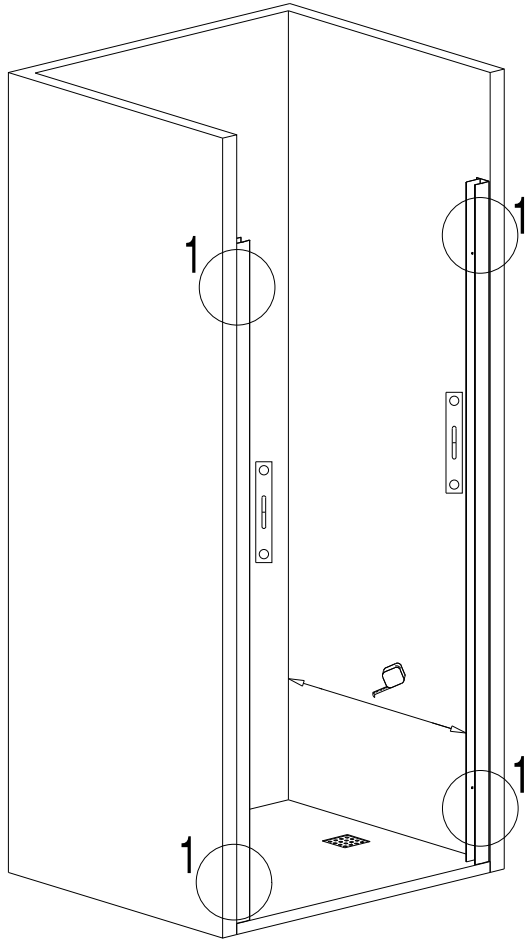**A**


1a

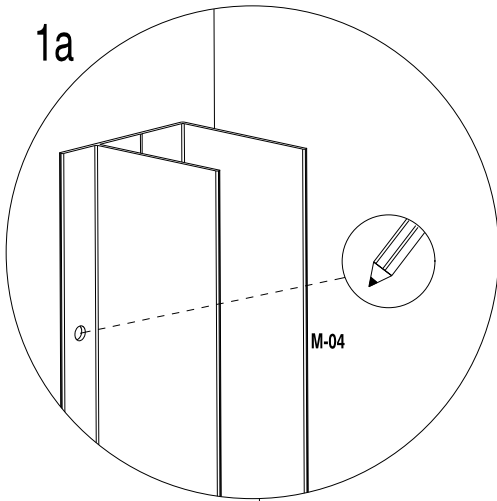


1b

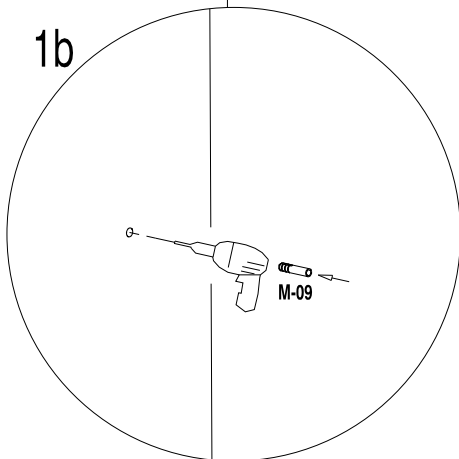
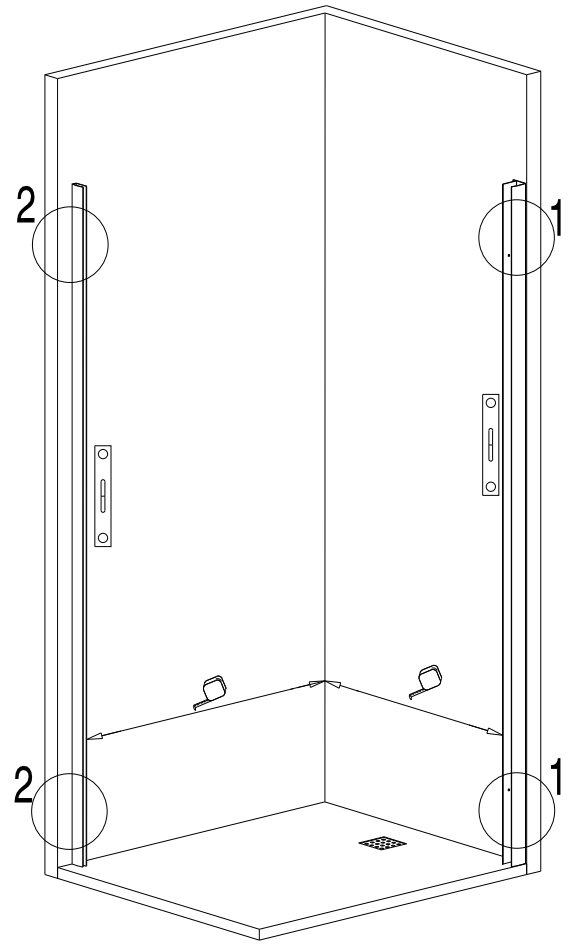
**B**

1

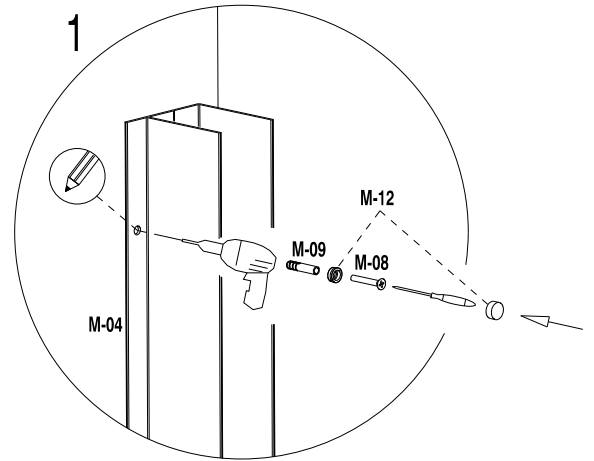


2



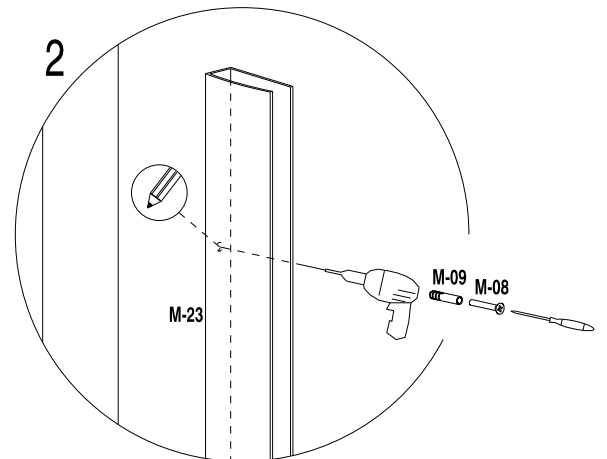


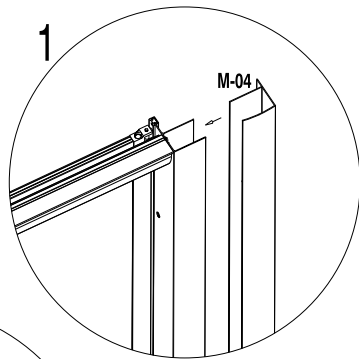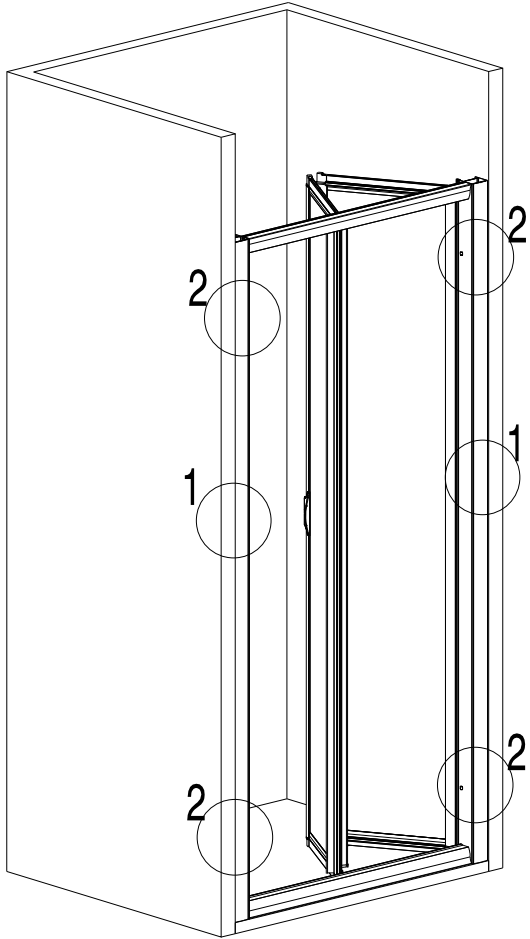**A**


2a

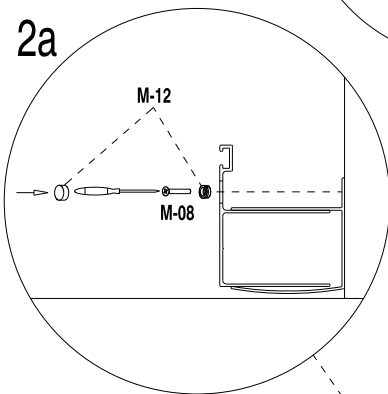




2b

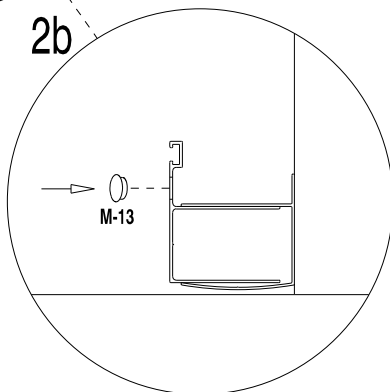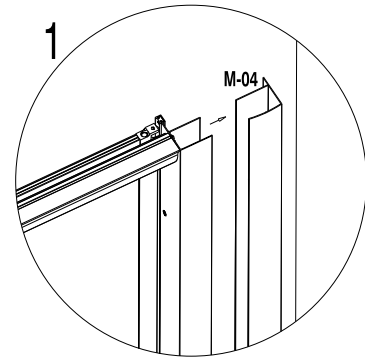
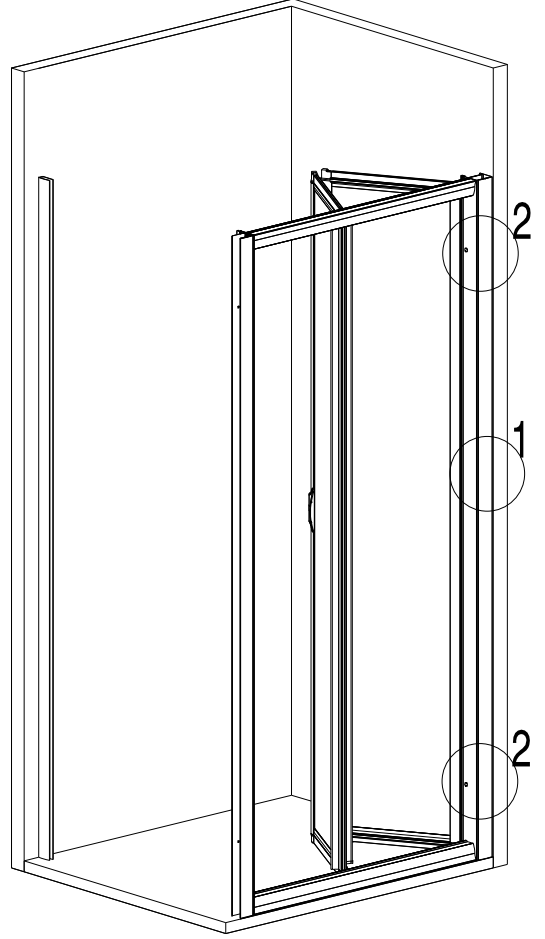
**B**

2

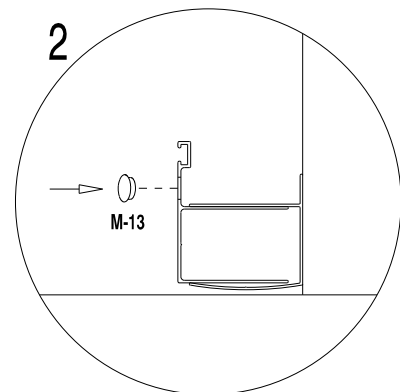


# B

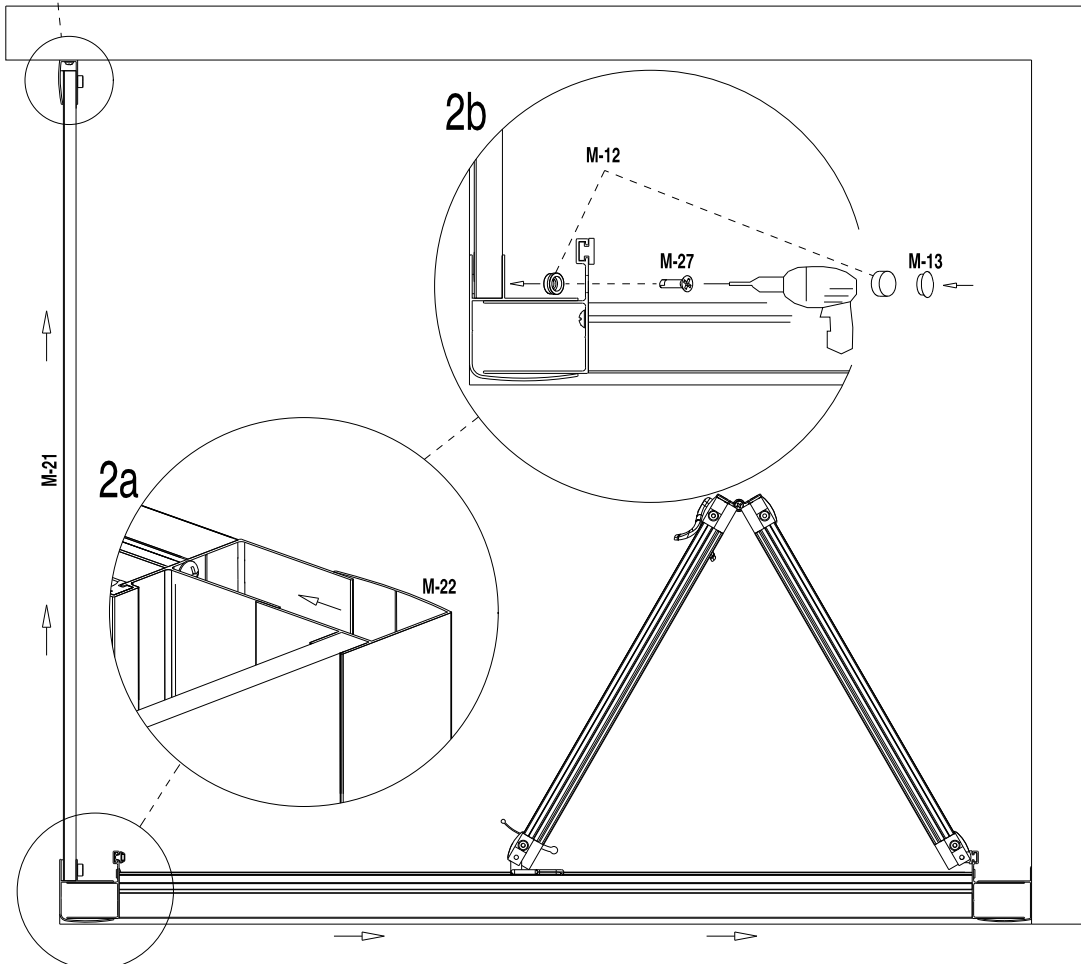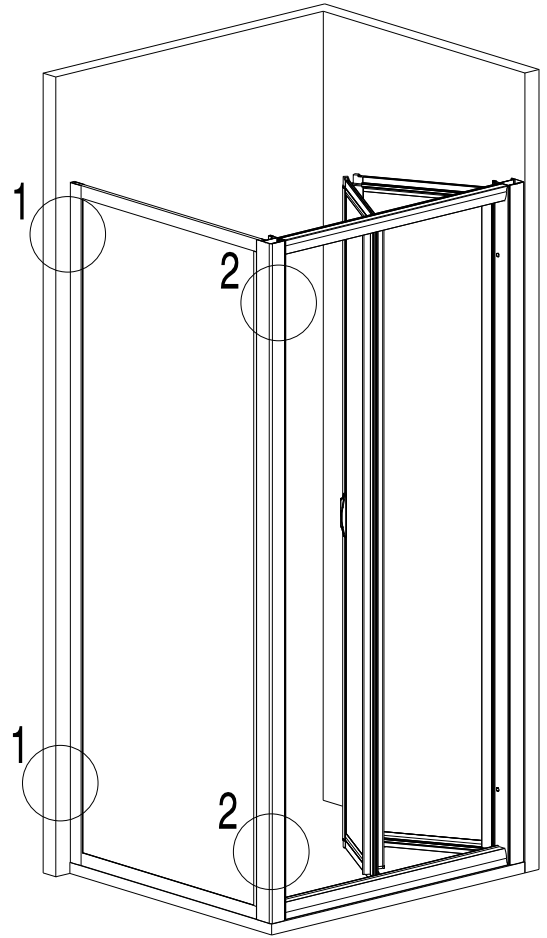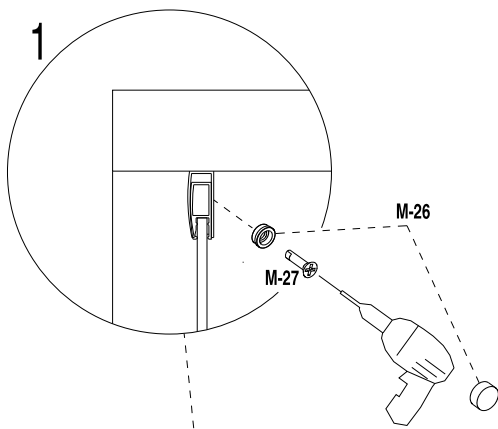


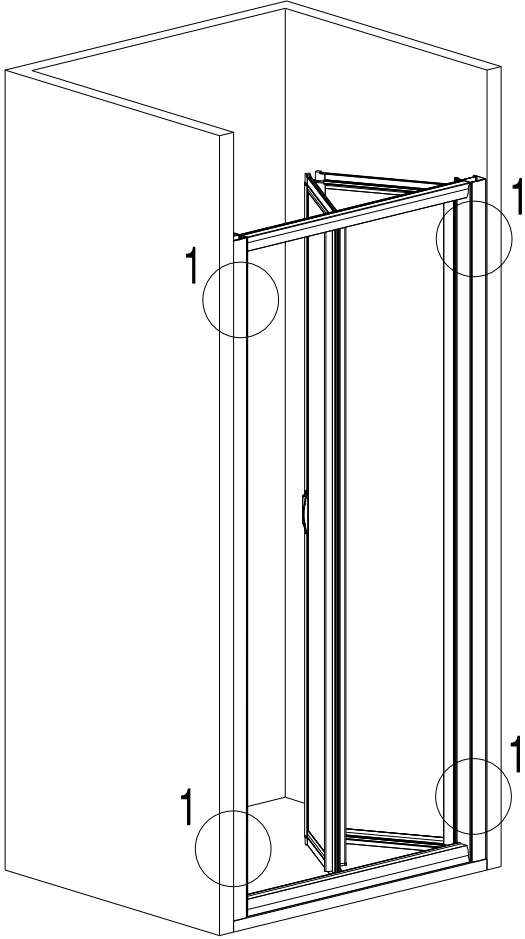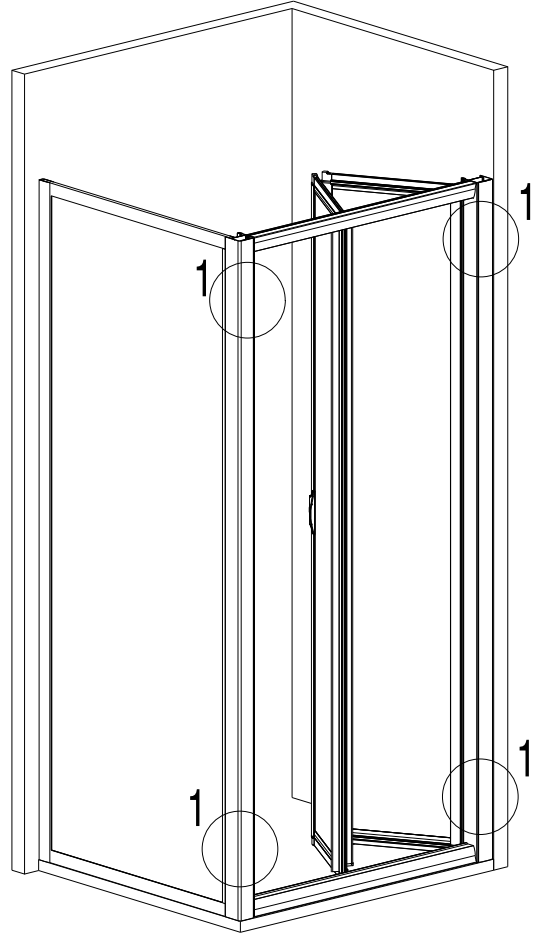**A****B**




1a

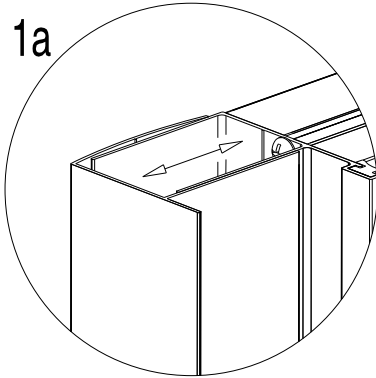


1b

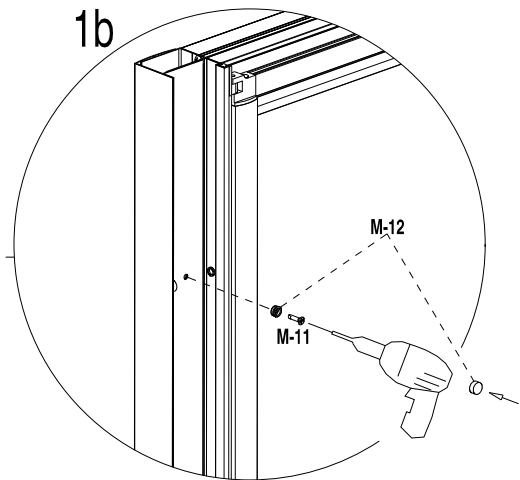

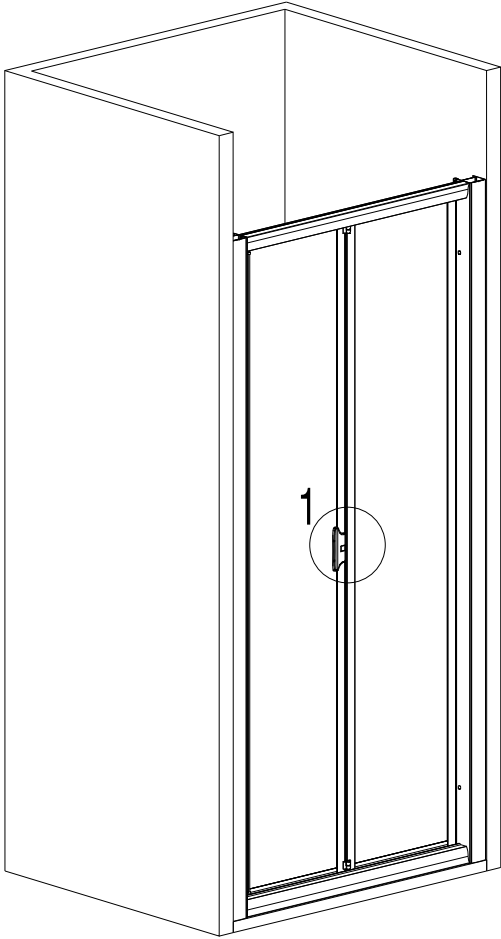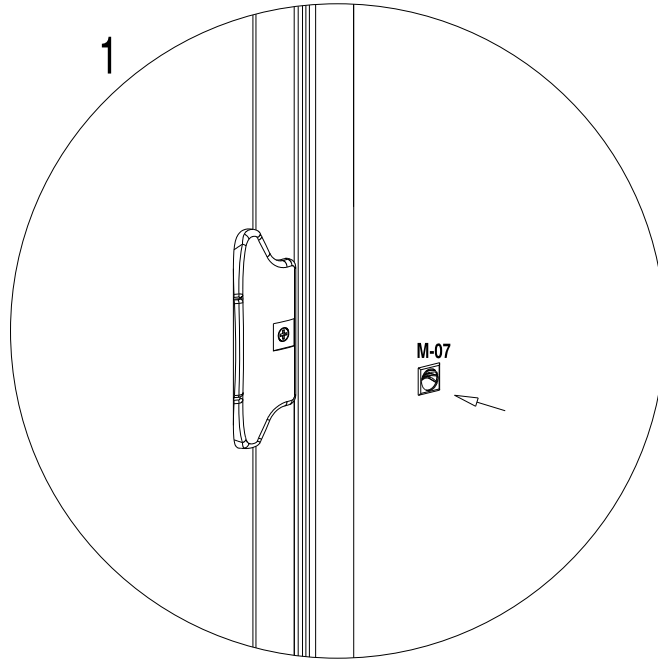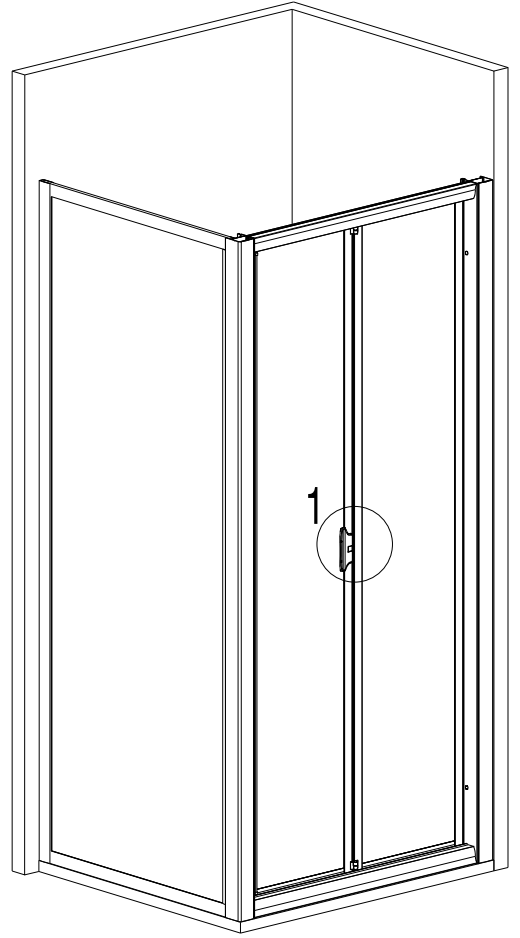


**A****B**


# A

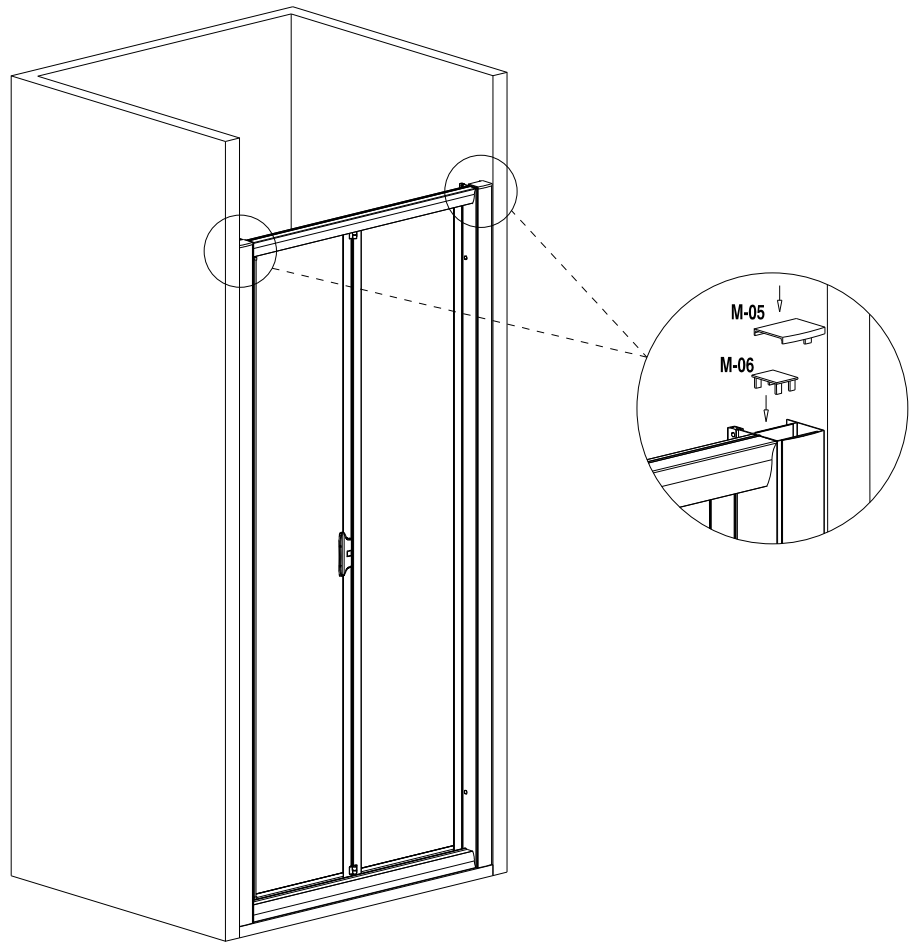



# B

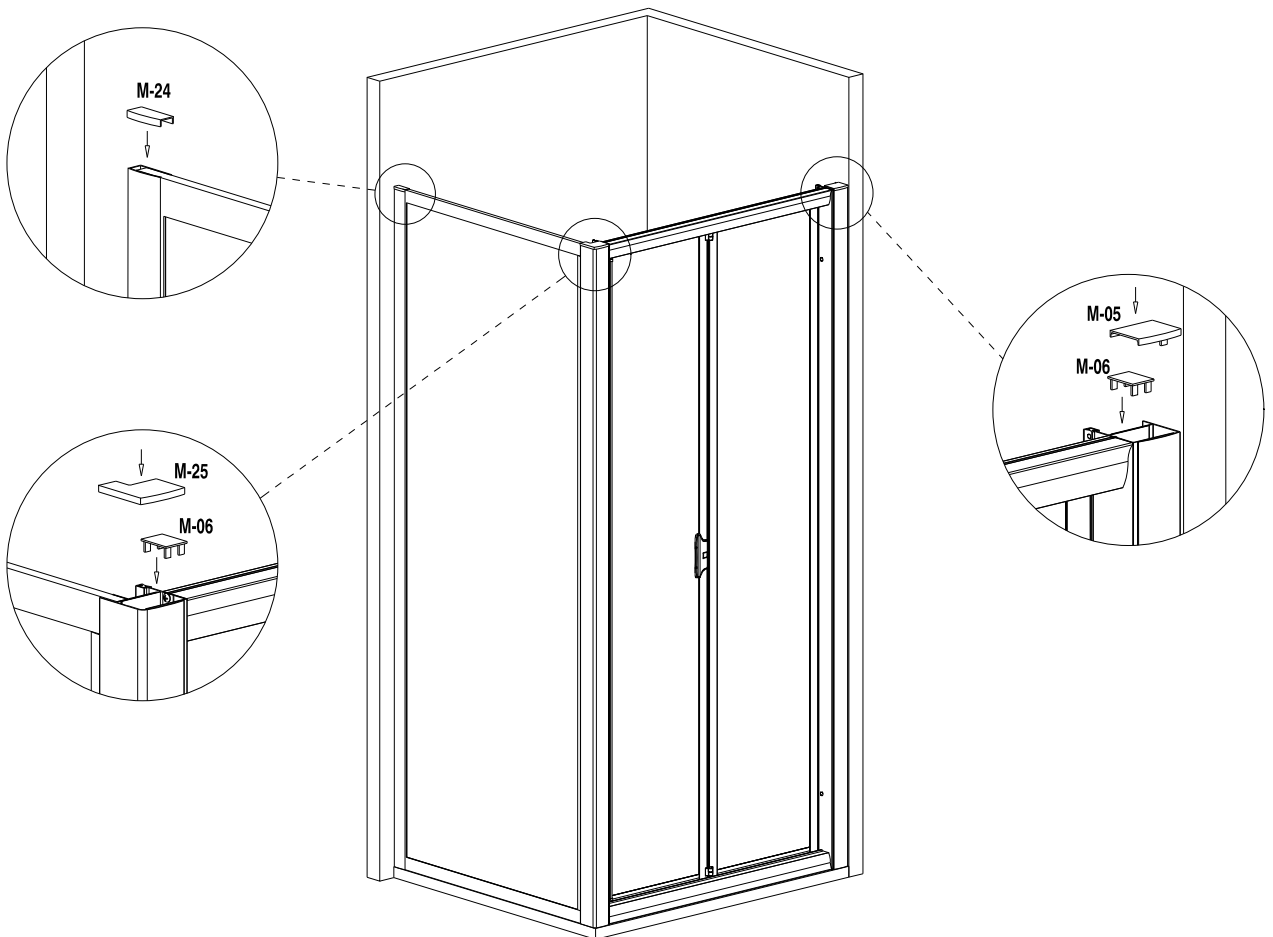


**A**

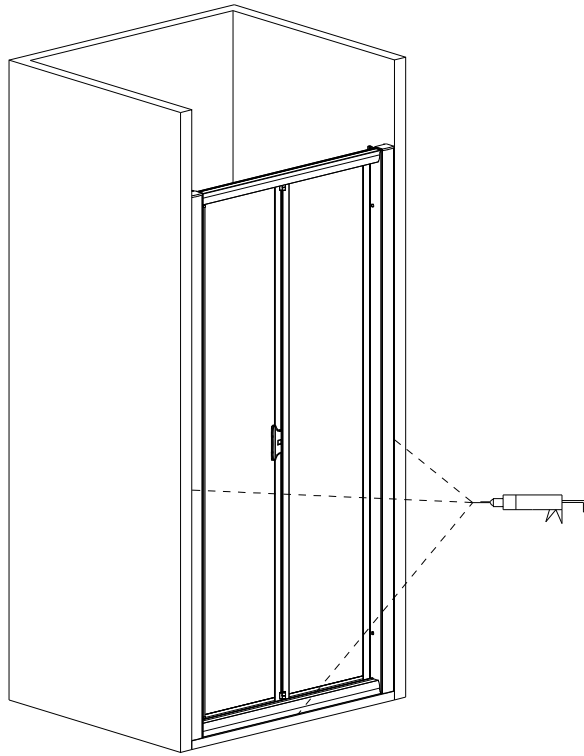


**B**

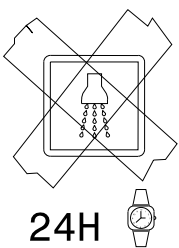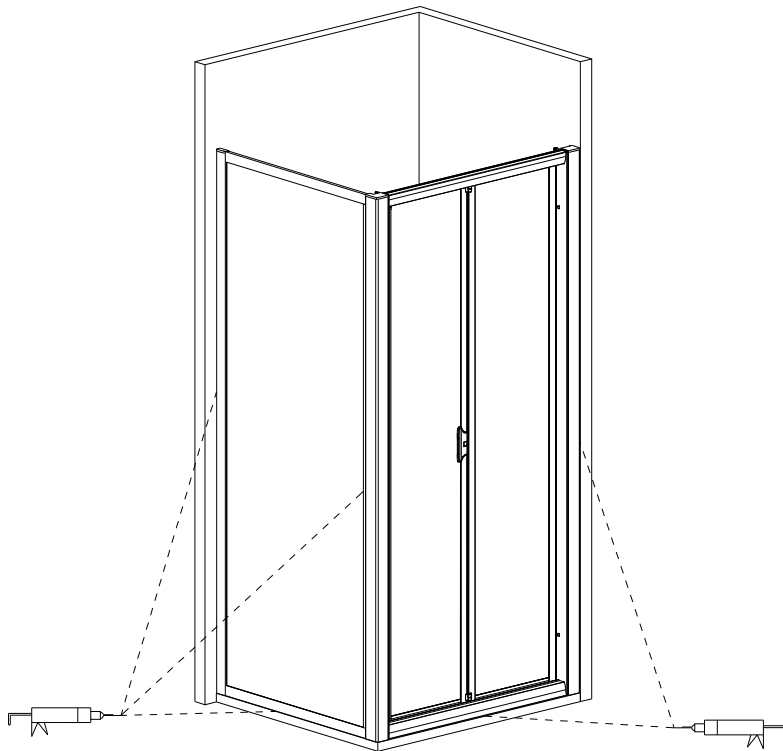


24H

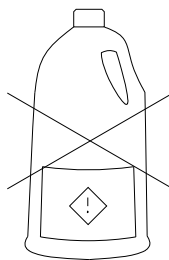

**X**



**✓**

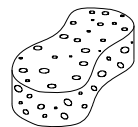



**EUROPEAN SYSTEMS SERVICES**  
**contact@expertbath.com**



13

UNE-EN 14428

