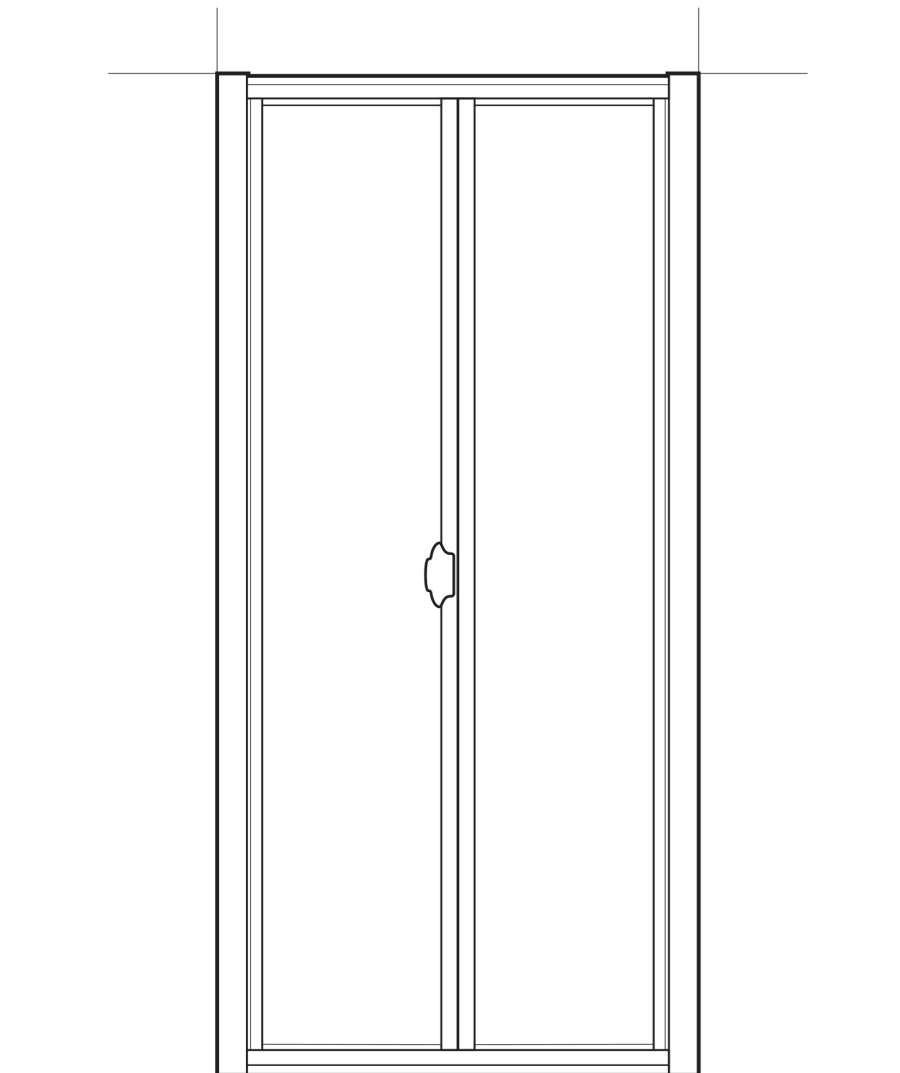
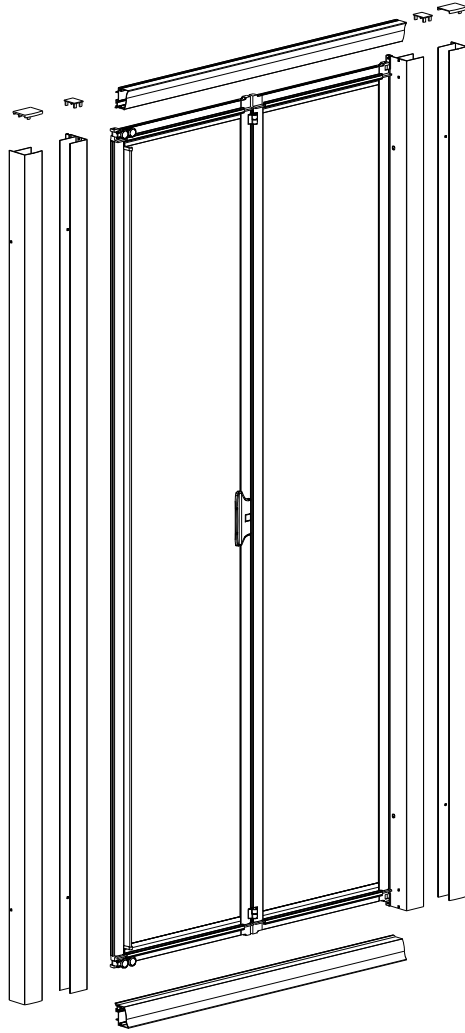


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

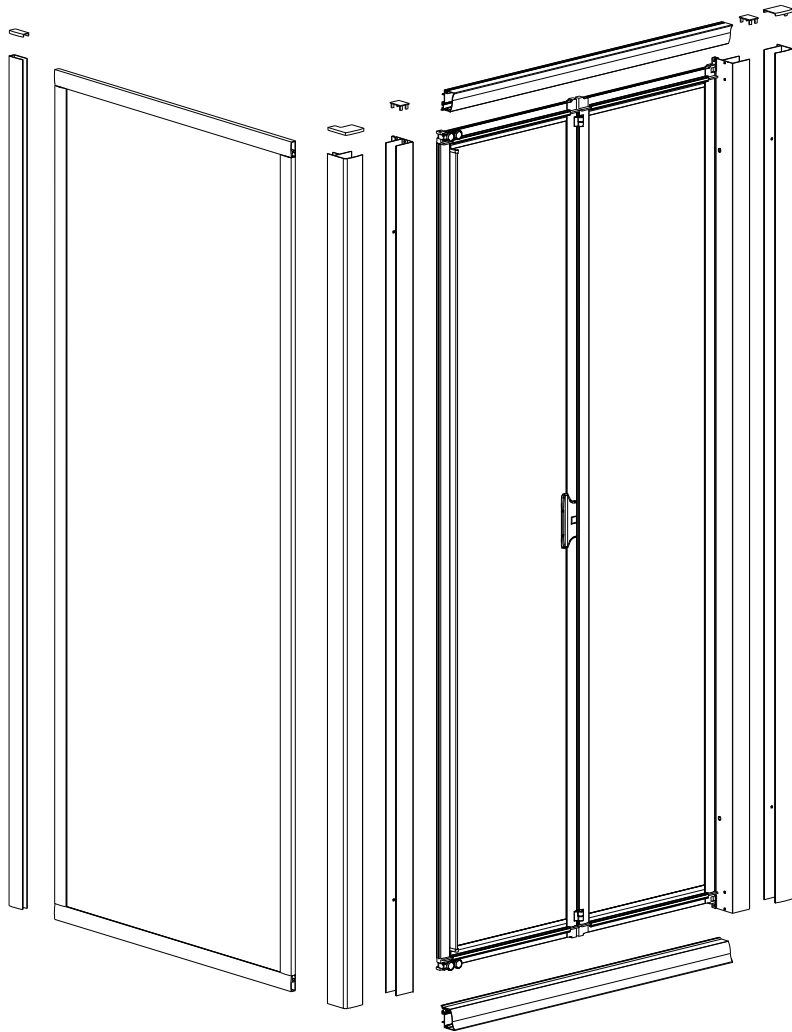
FURO A22

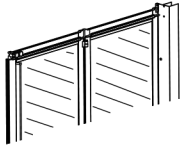



A




B



M-01  1

M-03  2

M-05  1

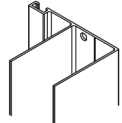
M-07  2


M-09  $\varnothing 6$ 4

M-11  3,5x16 4

M-13  4

A

M-02  1

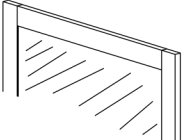
M-04  2


M-06  1


M-08  DIN 7981 4,2x32 4

M-10  DIN 7981 4,2x22 8

M-12  8

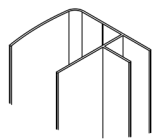
M-21  1


M-23  1

M-25  1


M-27  3,5x16 4

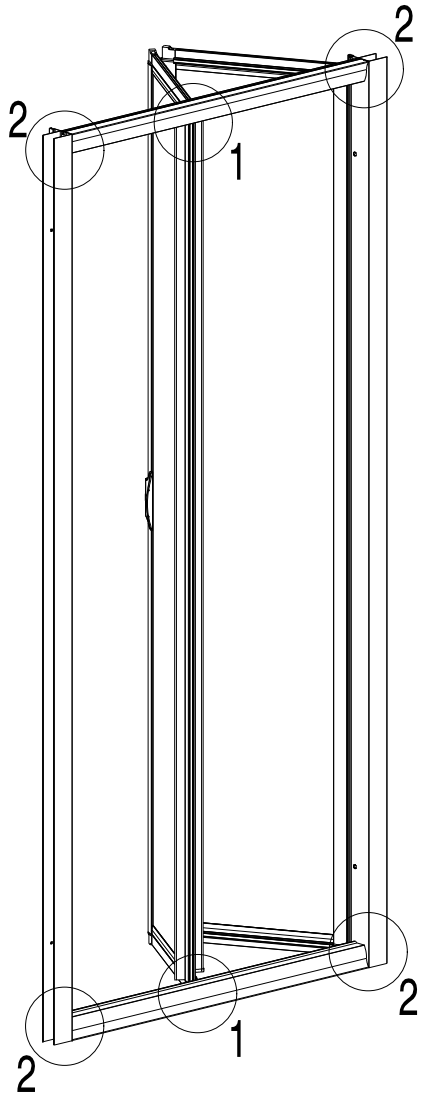
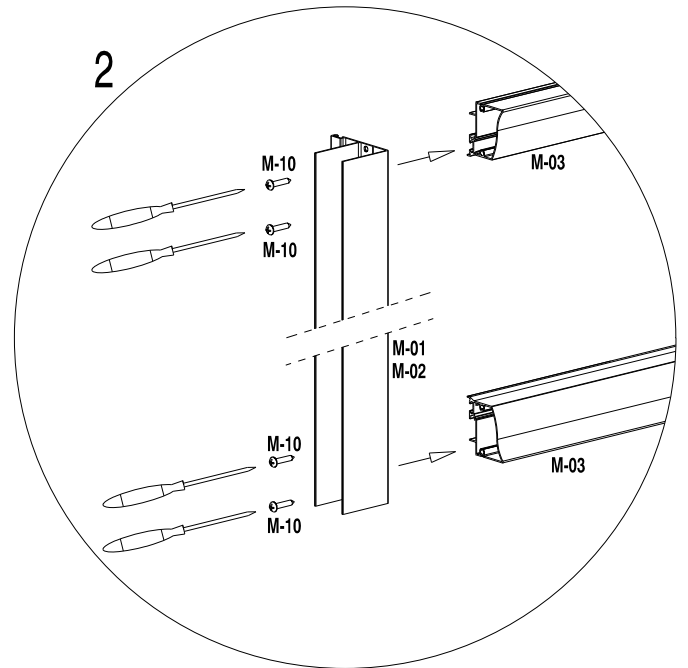
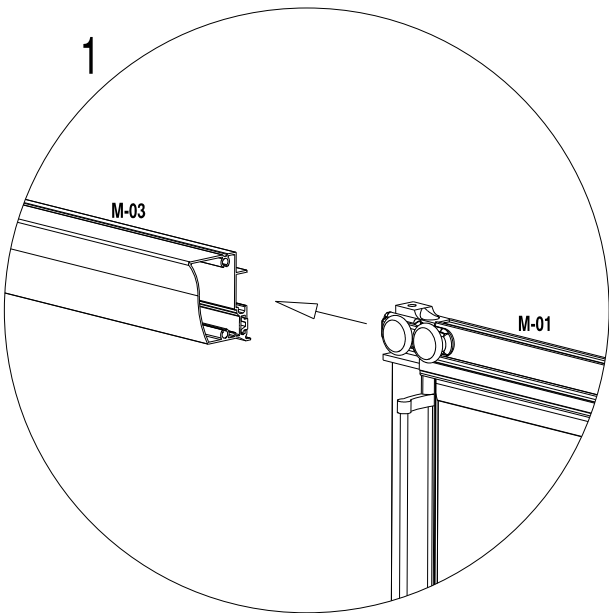
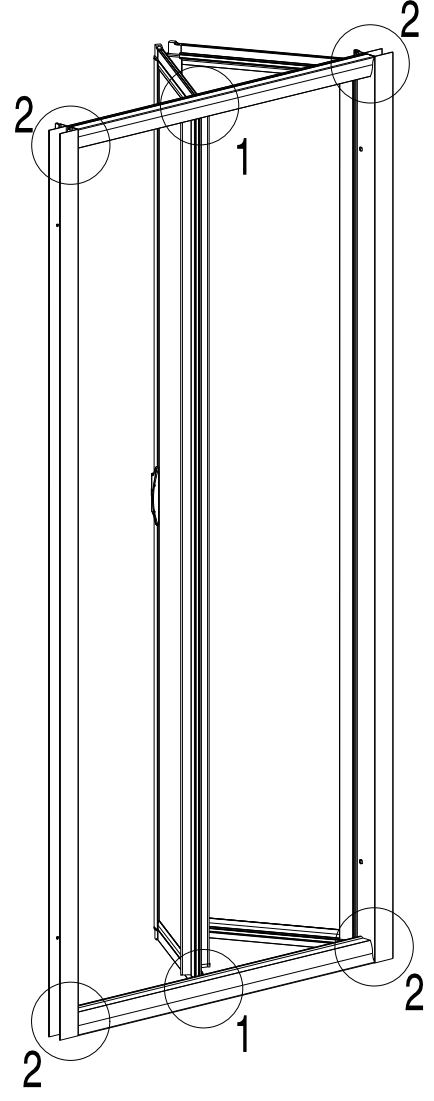
B

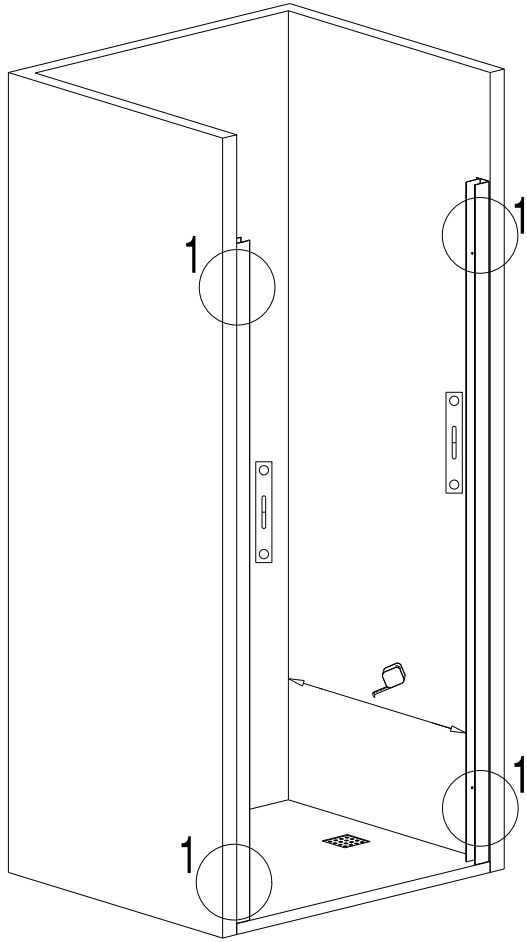
M-22  1

M-24  1

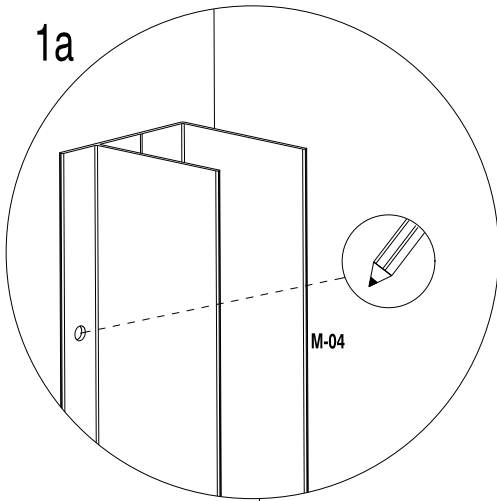
M-26  2



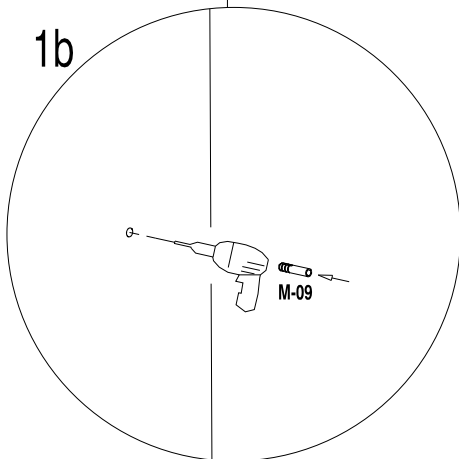
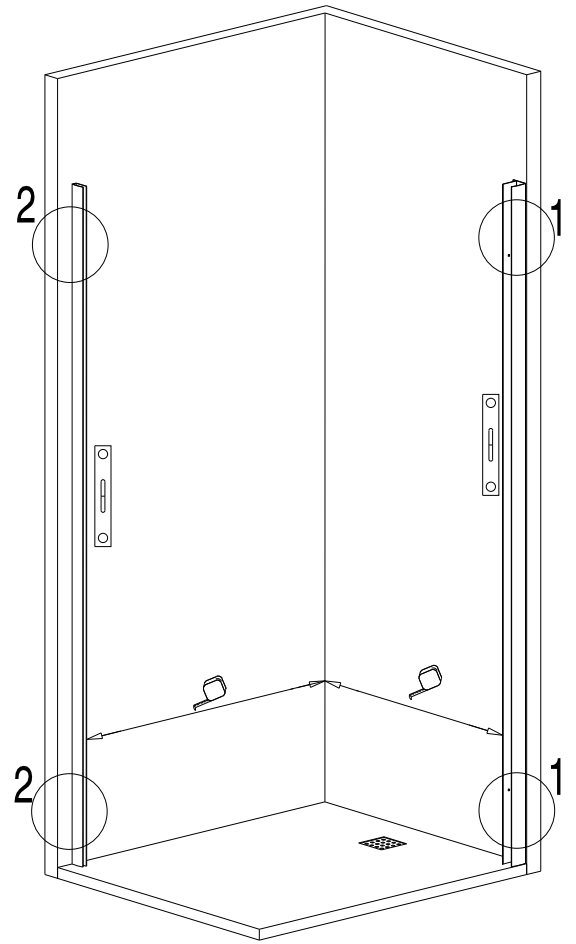
A**B**

A

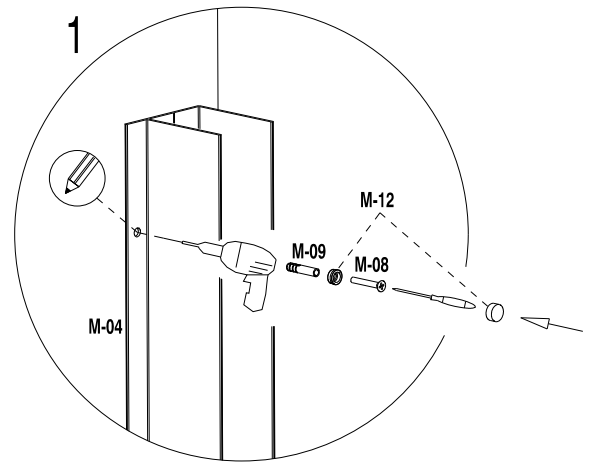
1a



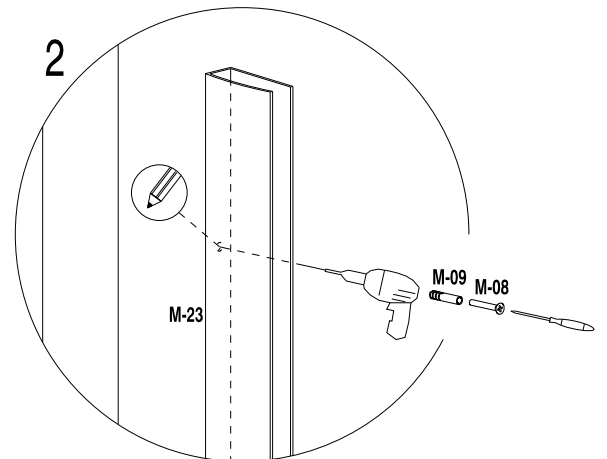
1b

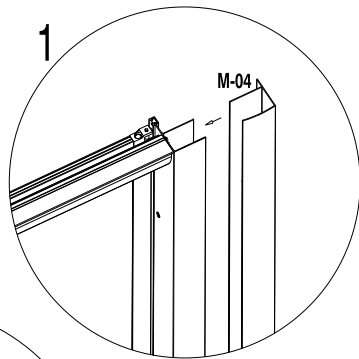
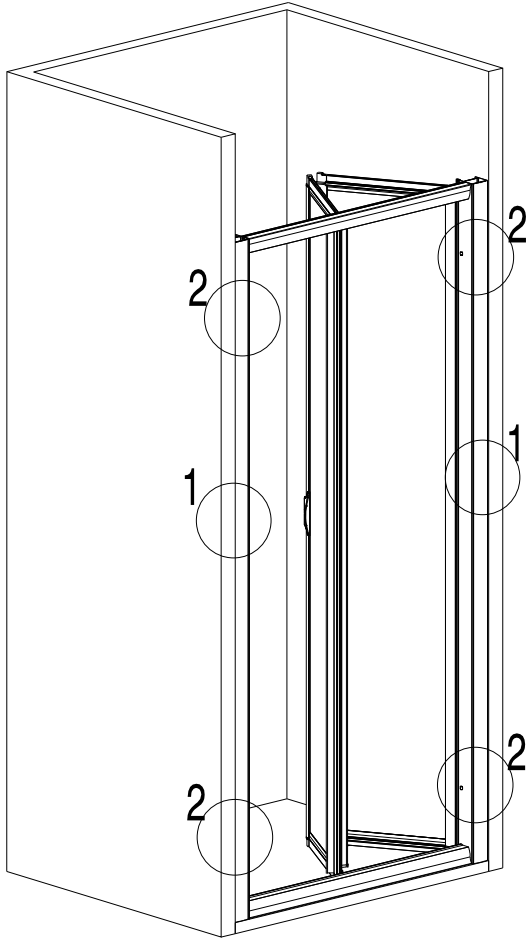
**B**

1

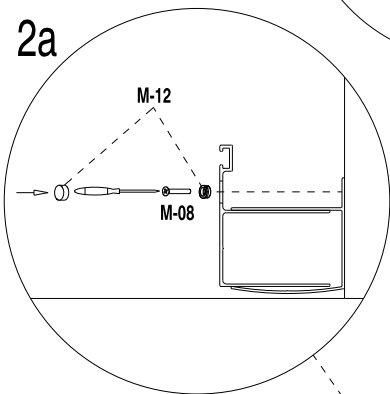


2

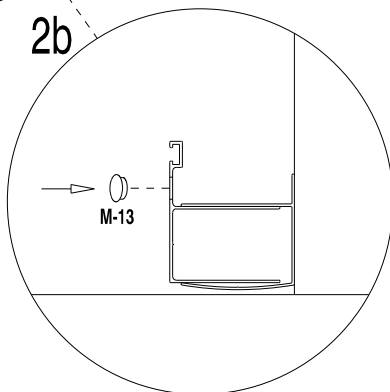
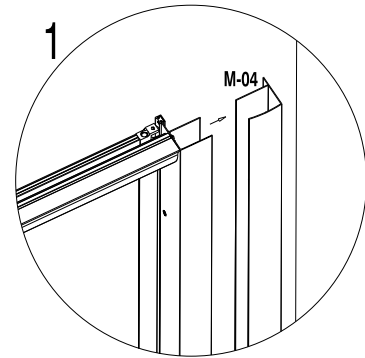
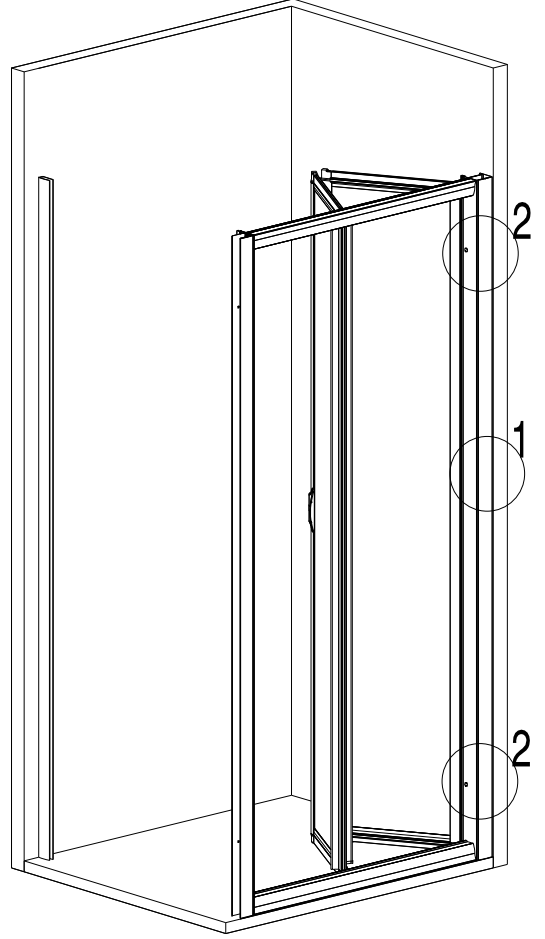


A

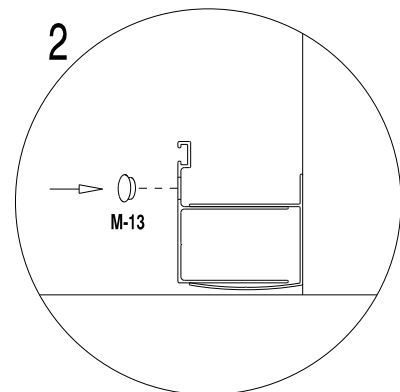
2a



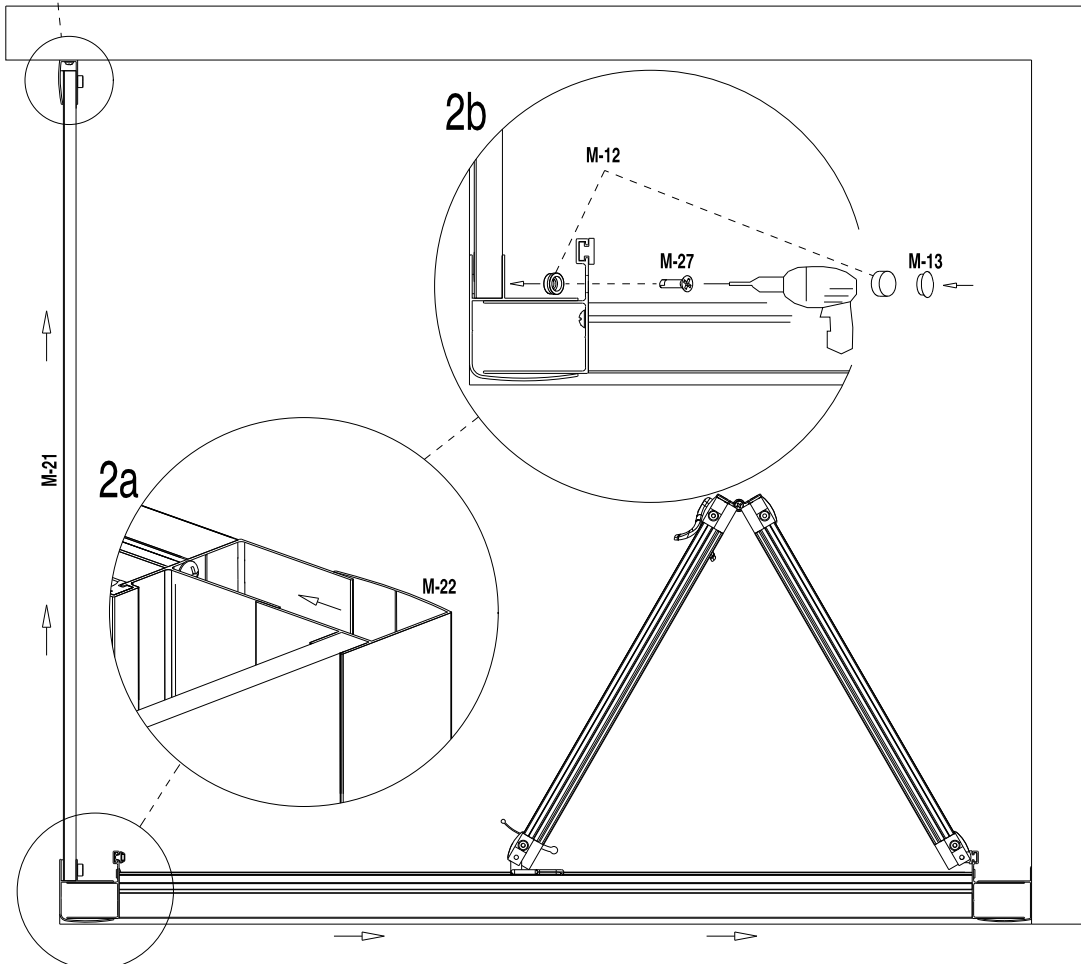
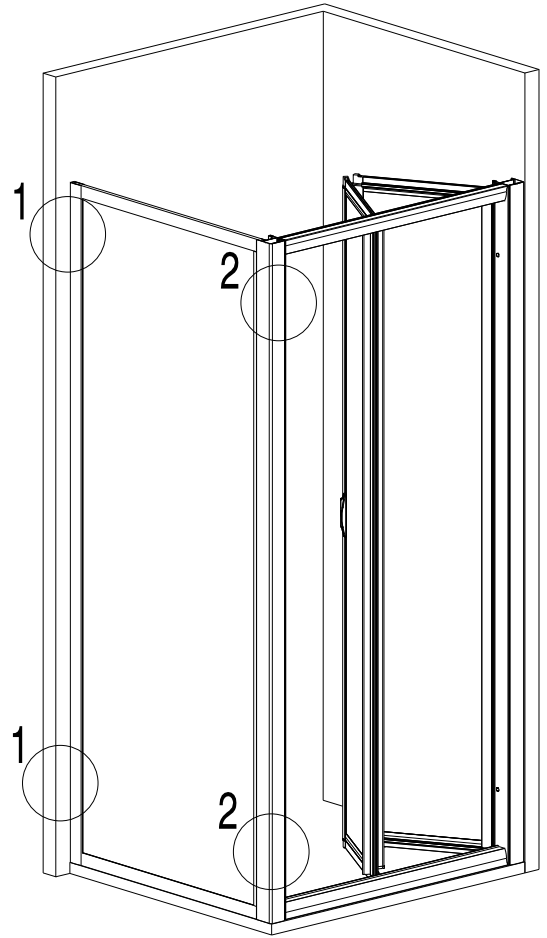
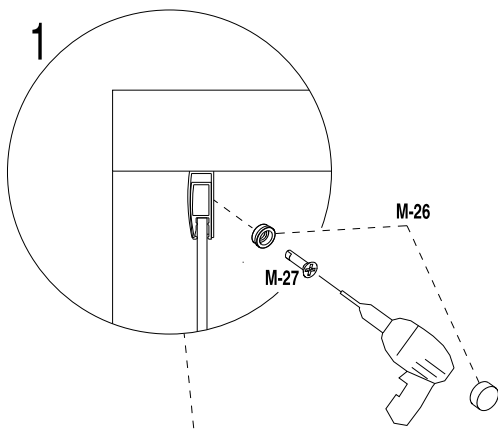
2b

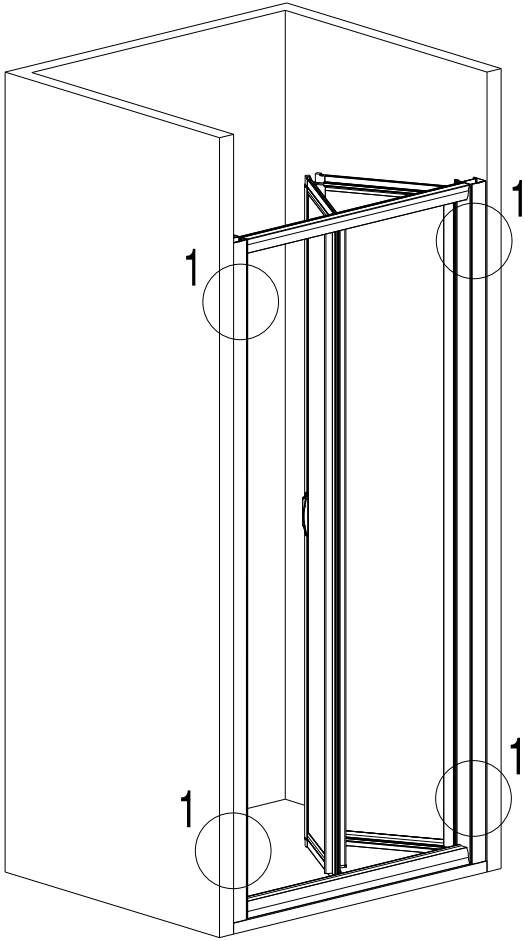
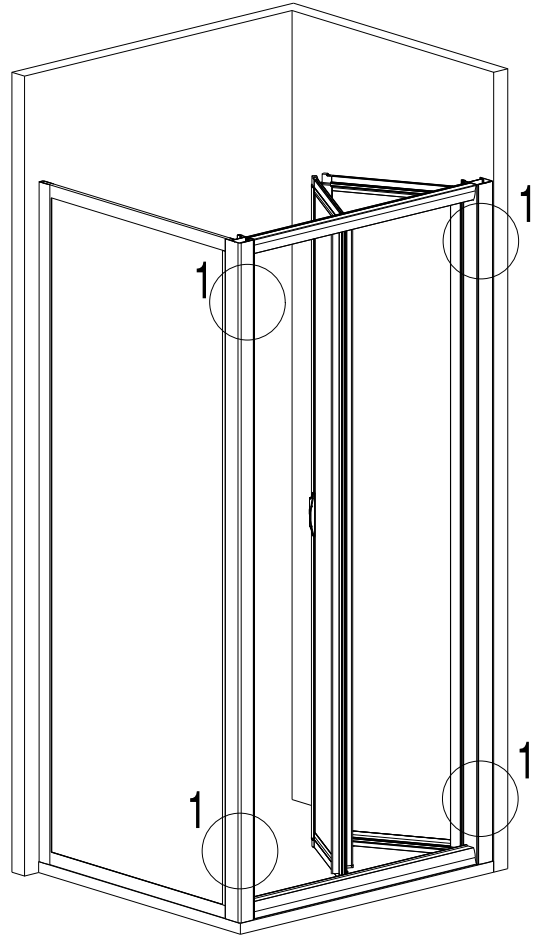
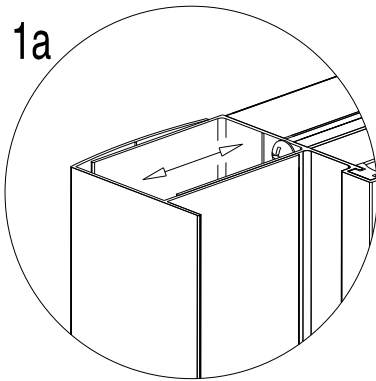
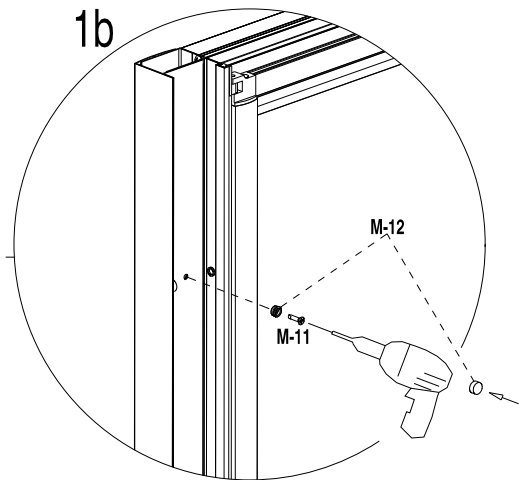
**B**

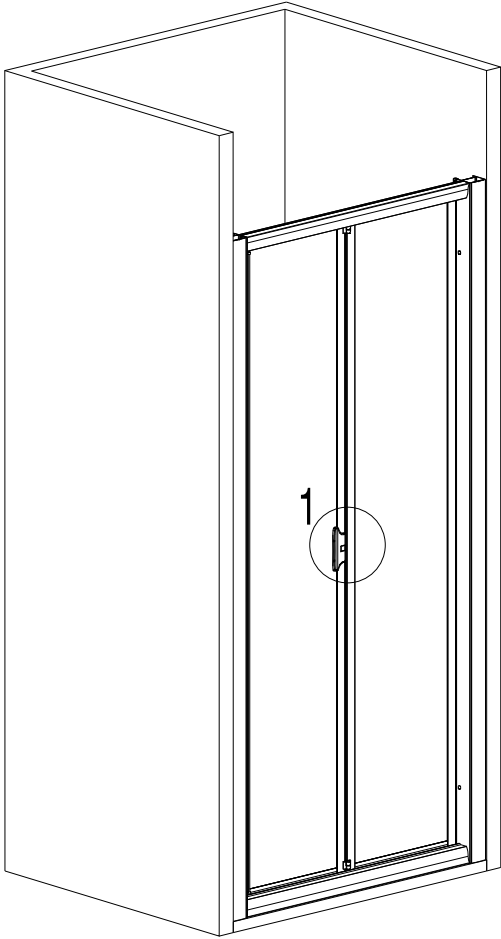
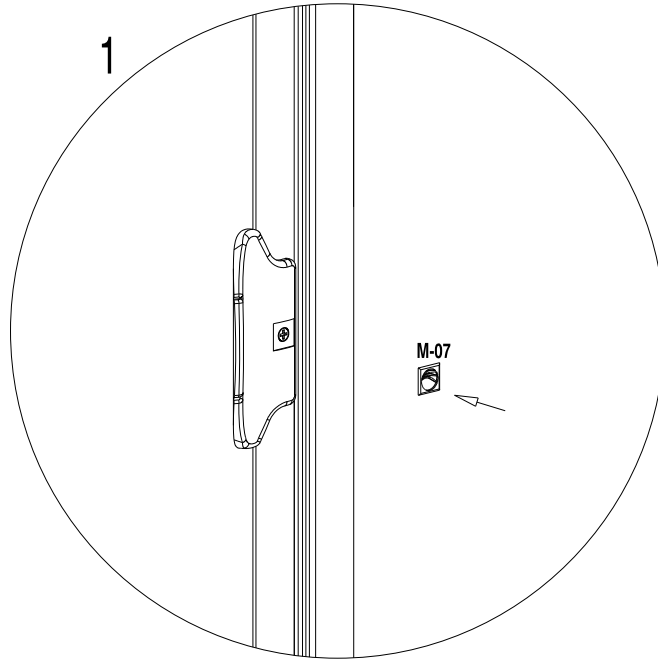
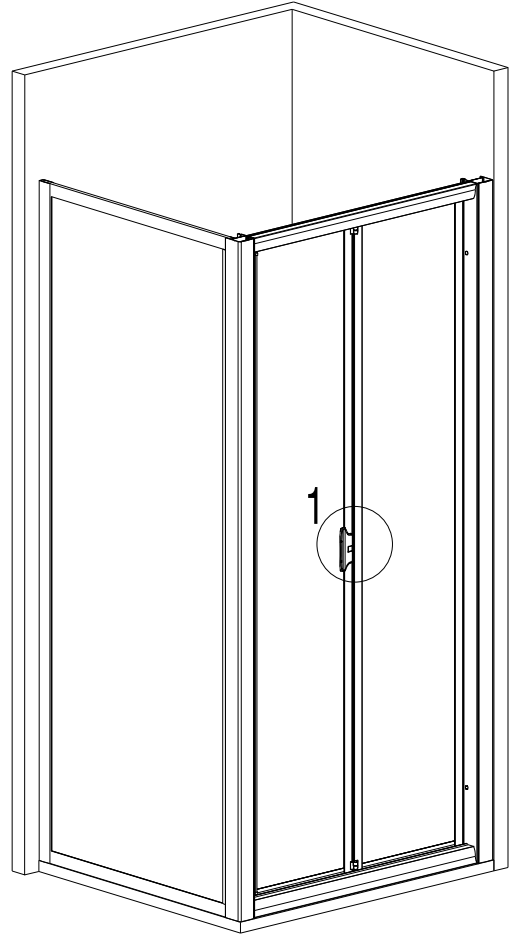
2



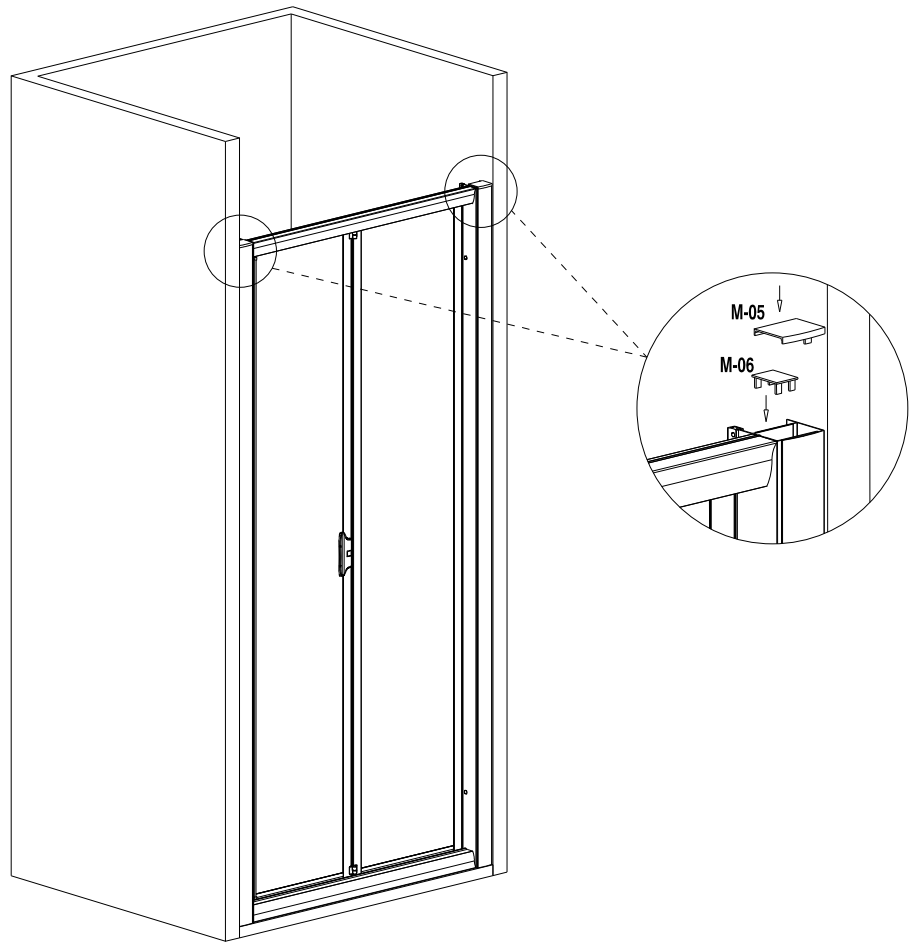
B



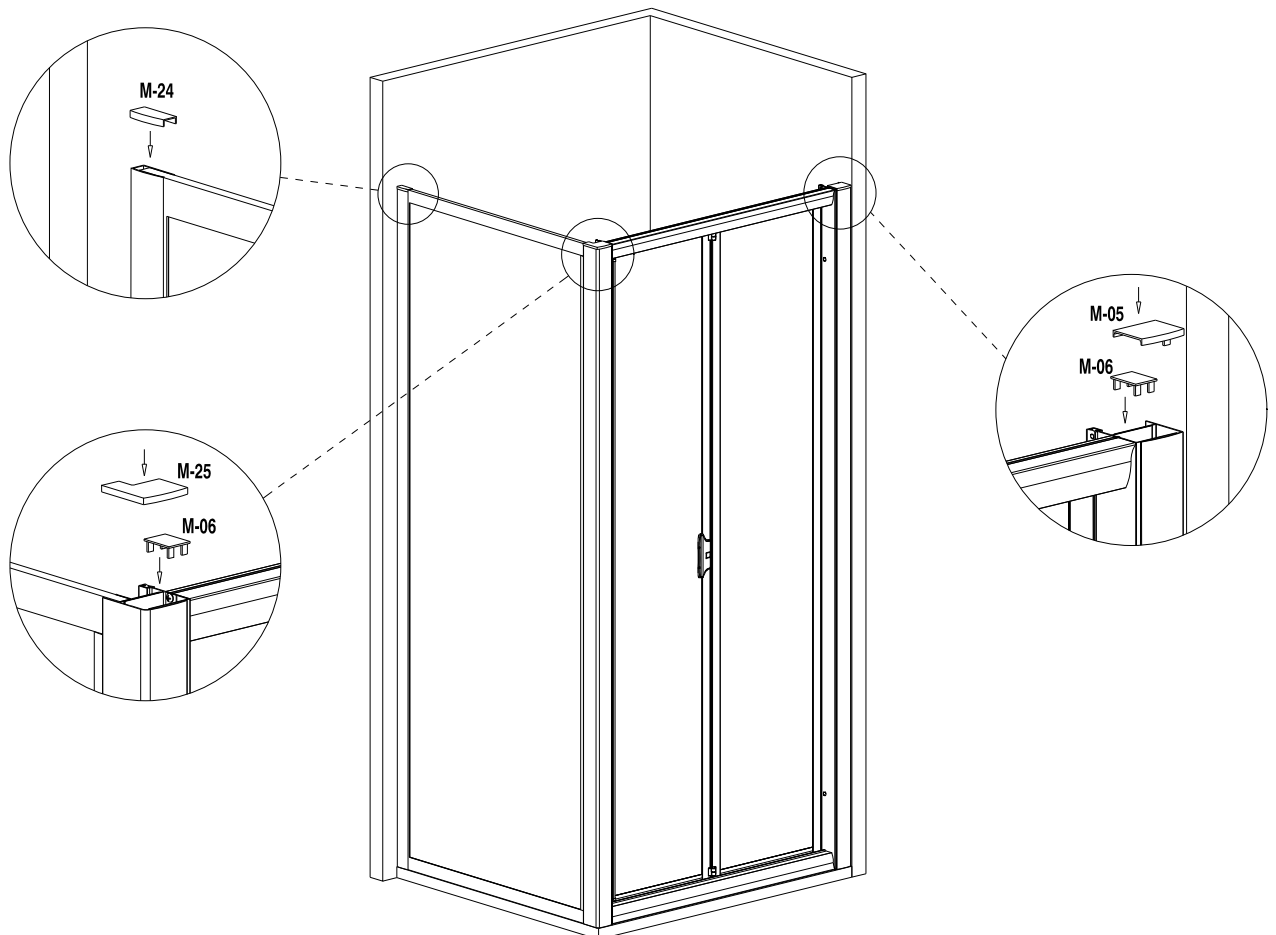
A**B****1a****1b**

A**B**

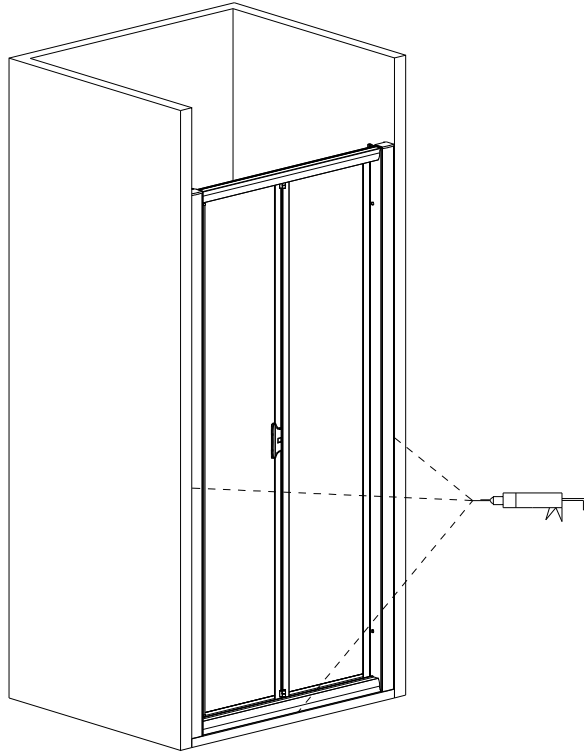
A



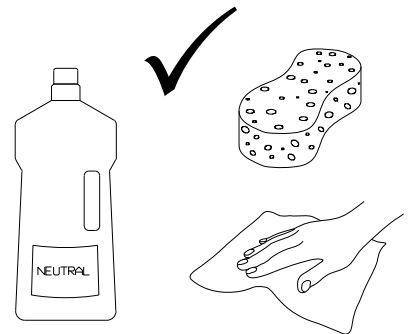
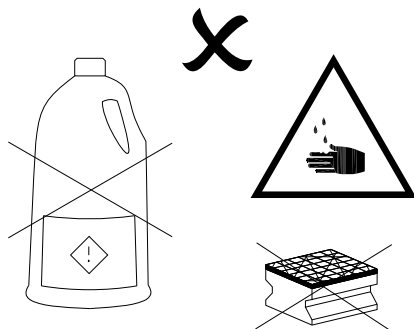
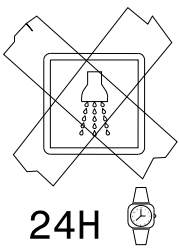
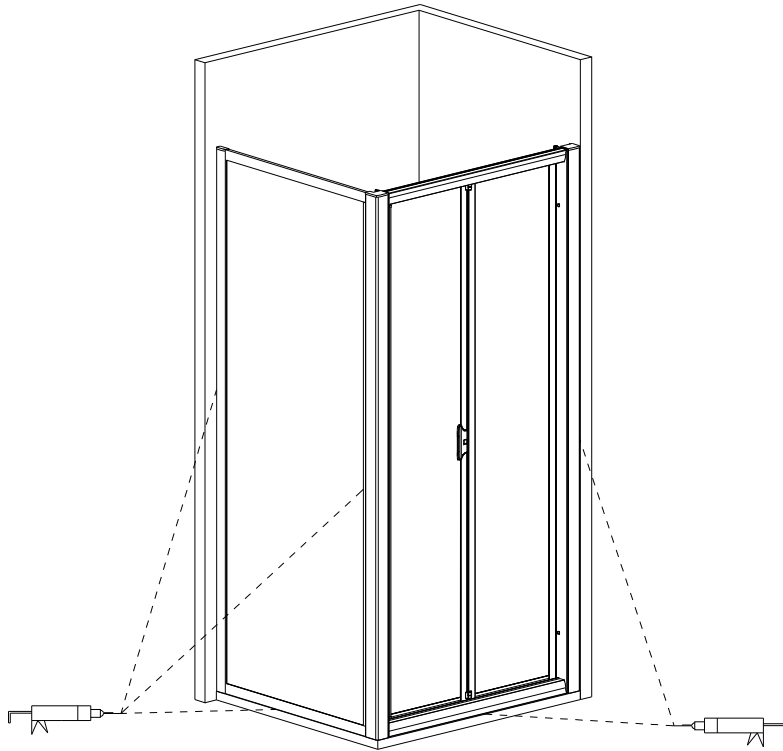
B



A



B





EUROPEAN SYSTEMS SERVICES
contact@expertbath.com



13

UNE-EN 14428

