



// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


FURO B18 - Option A FURO B22 - Option B

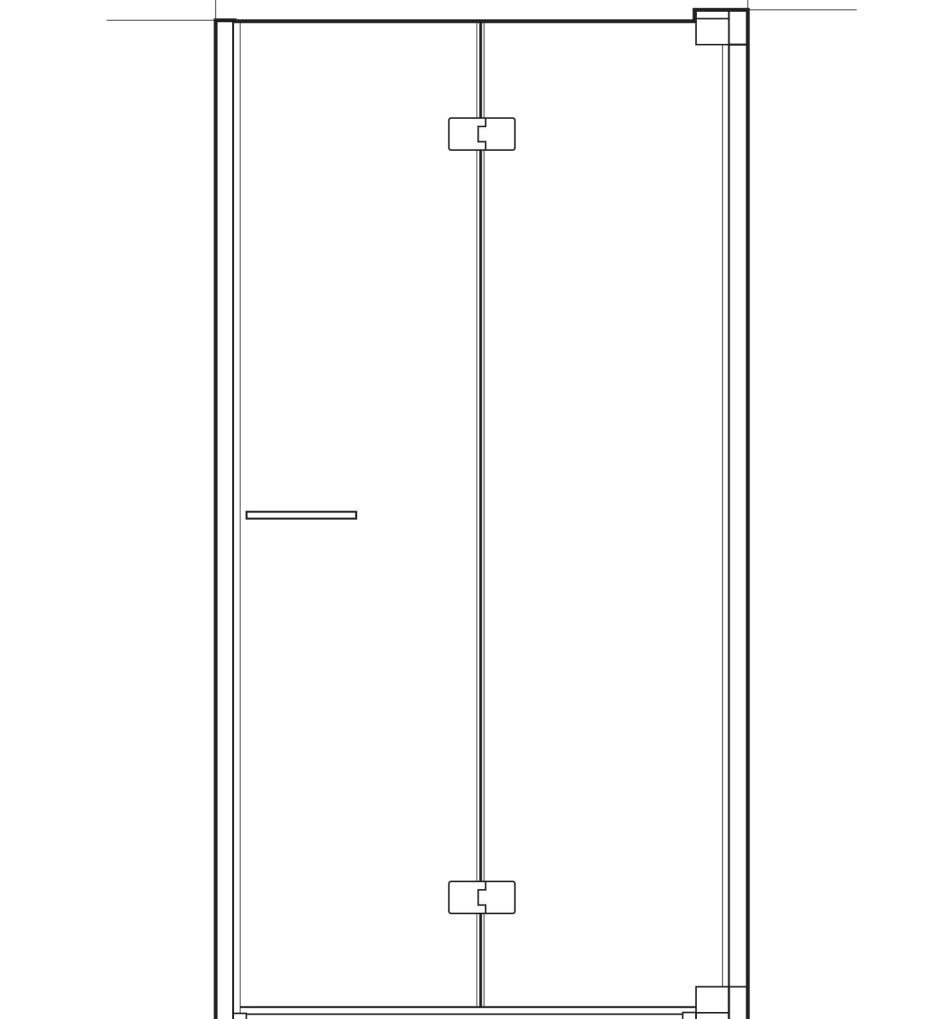

A

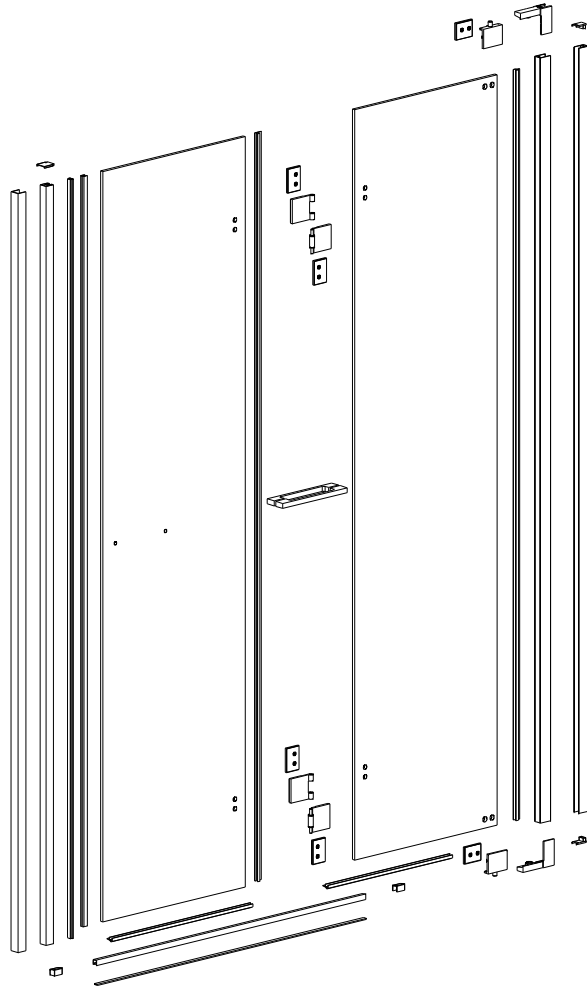



B

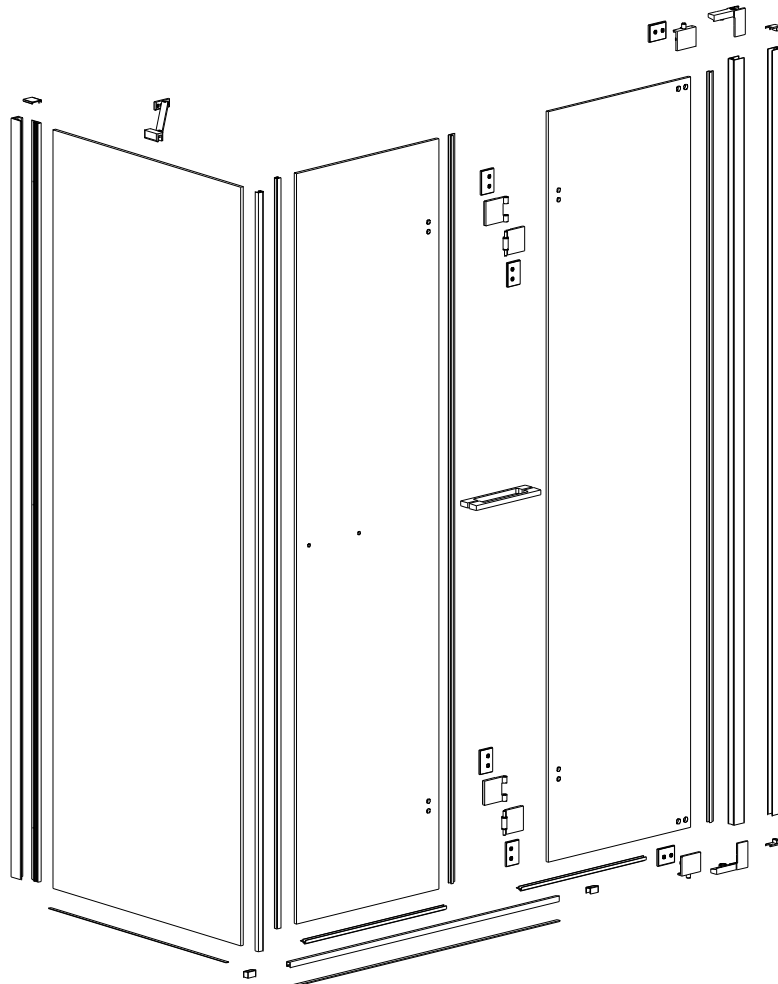


A

M-01  1


M-03  1


M-05  1

M-07  1

M-09  1

M-11  1


M-13  1


M-15  1


M-17  2
DIN 7982 4,2x16


M-19  6

M-21  $\phi 6$ 6


M-02  1


M-04  1


M-06  2

M-08  1

M-10  1

M-12  2

M-14  1


M-16  1


M-18  12


M-20  6
DIN 7982 4,2x32


M-22  $3,5 \times 16$ 6

B

M-23  1

M-24  1

M-26  1

M-27  1


M-28  2
DIN 7982 4,2x32

M-29  $\phi 6$ 2


M-30  3




A

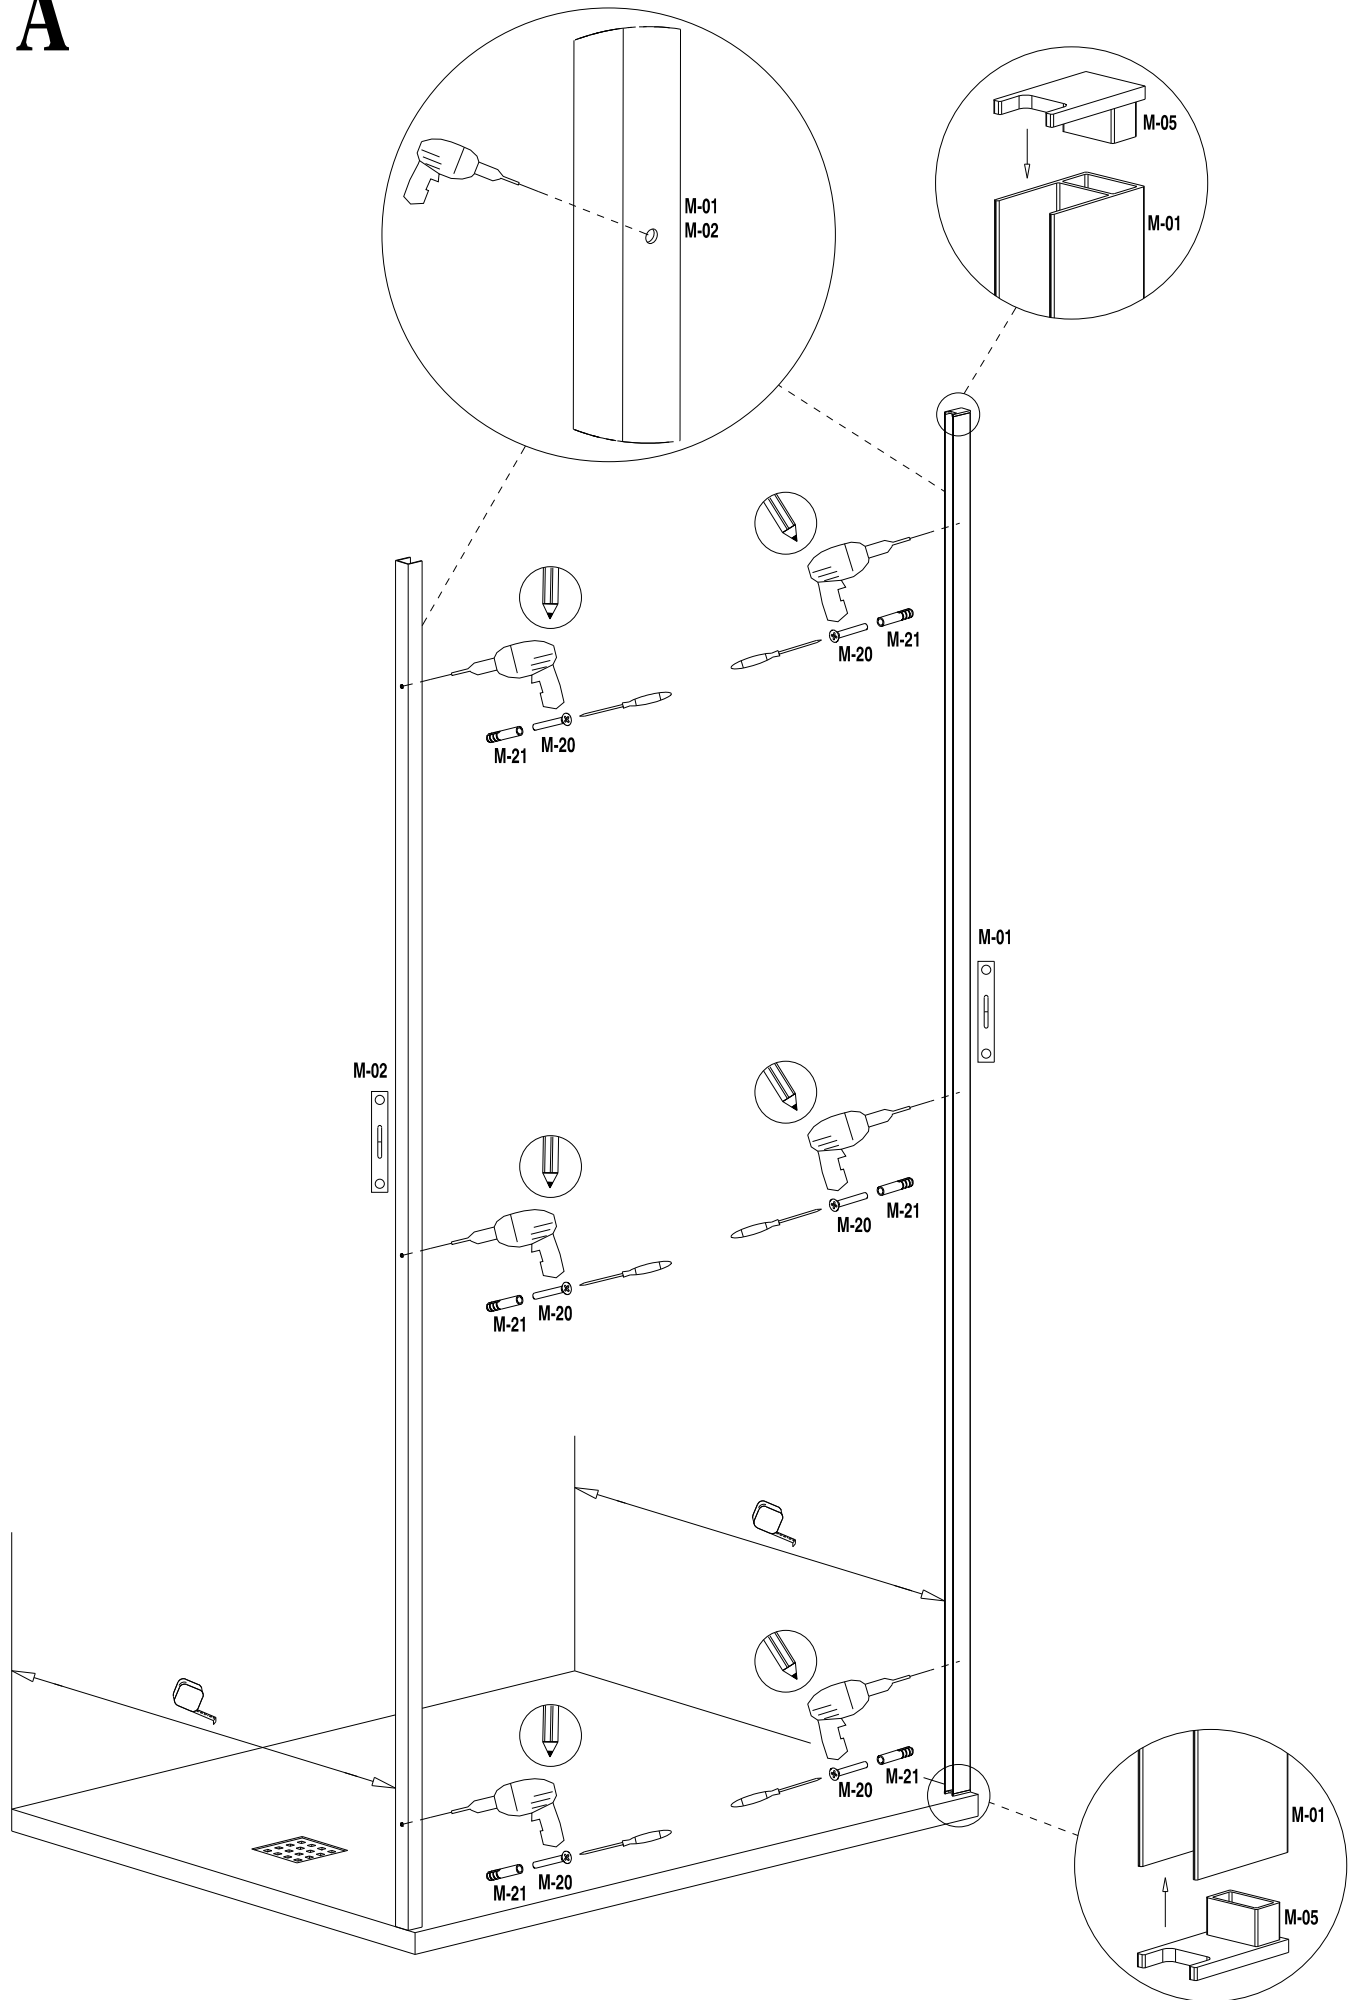





B






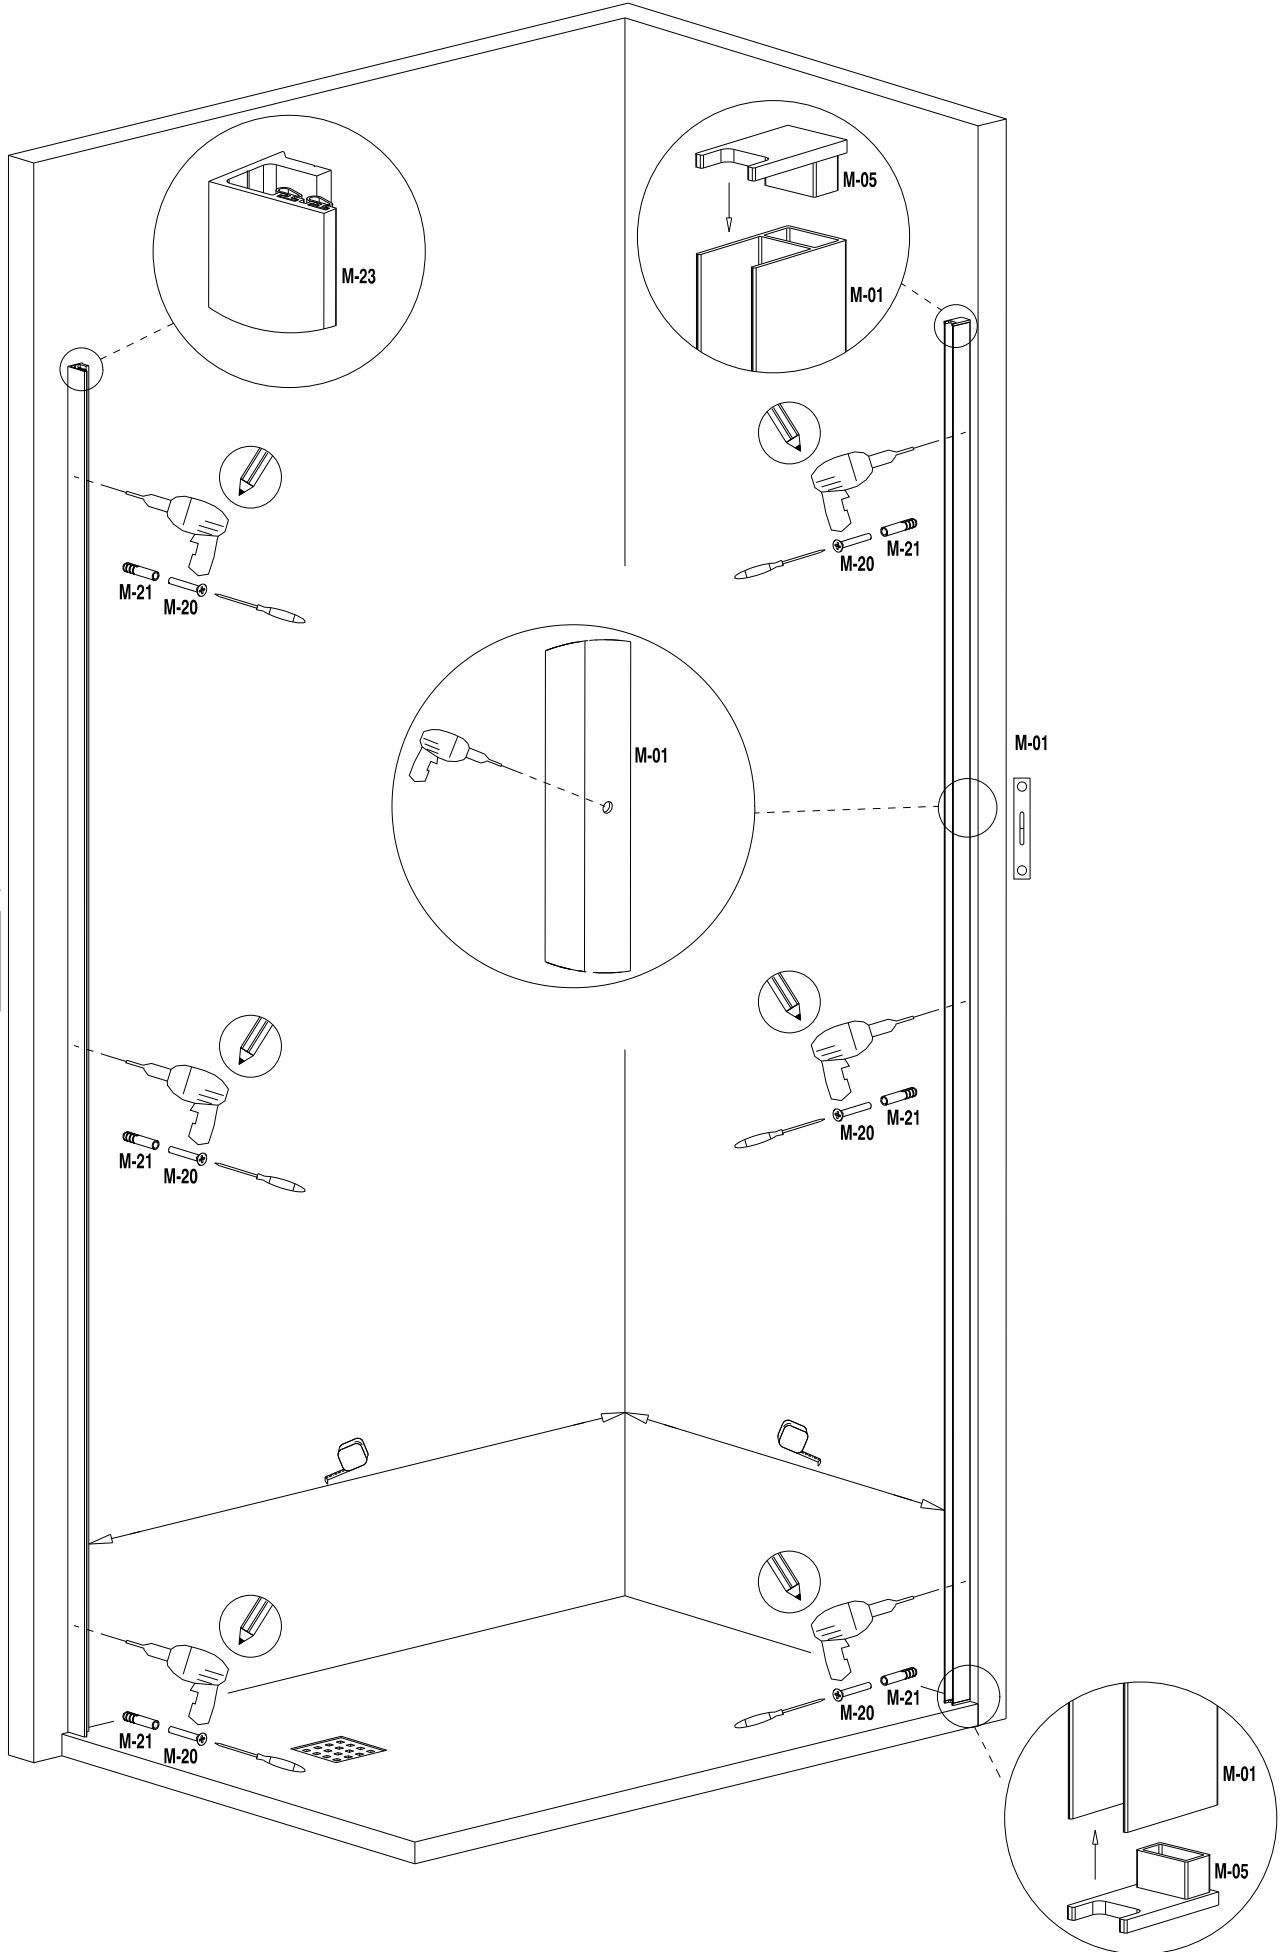






A-B







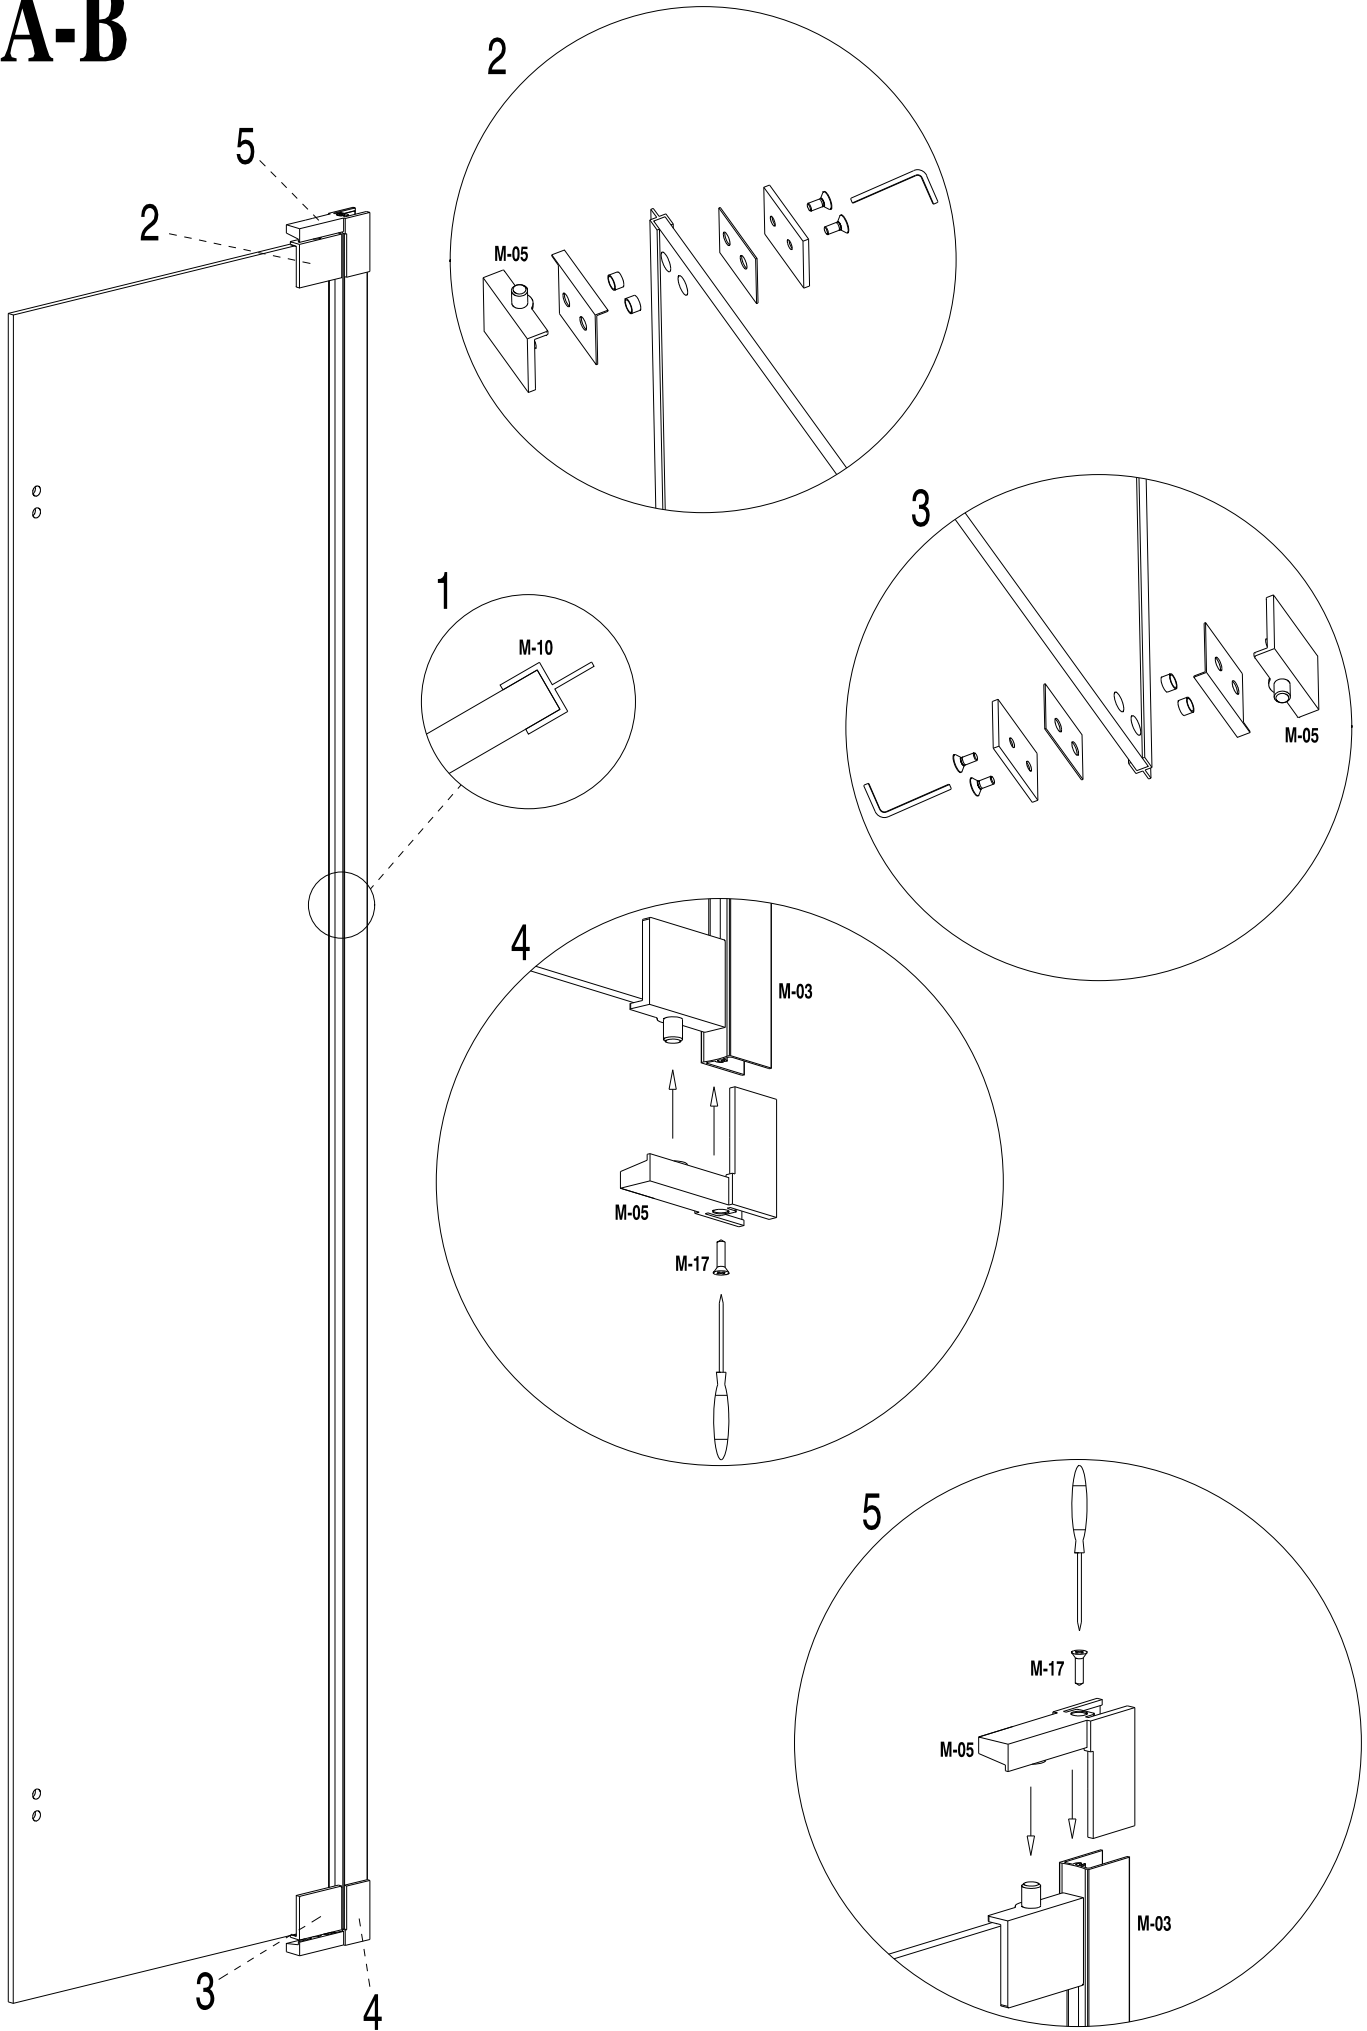


A-B

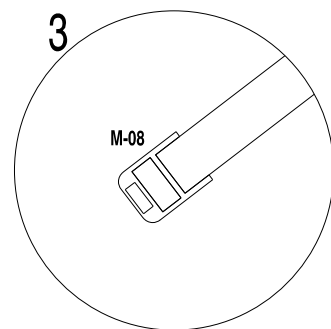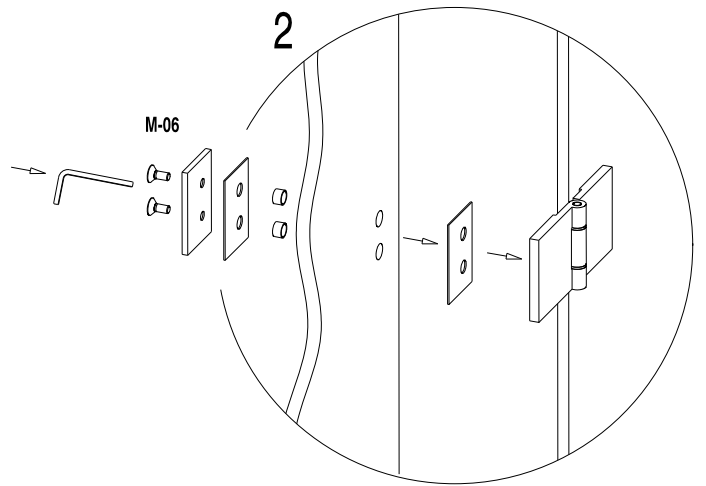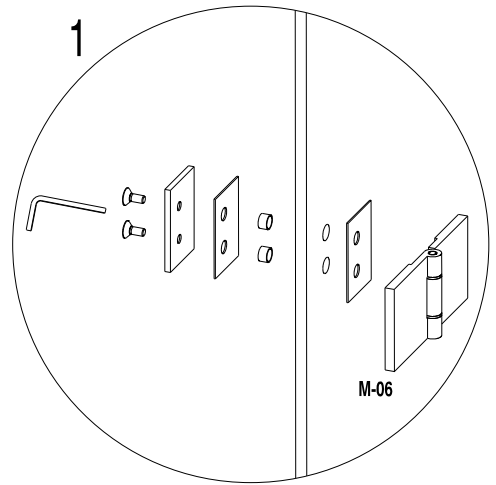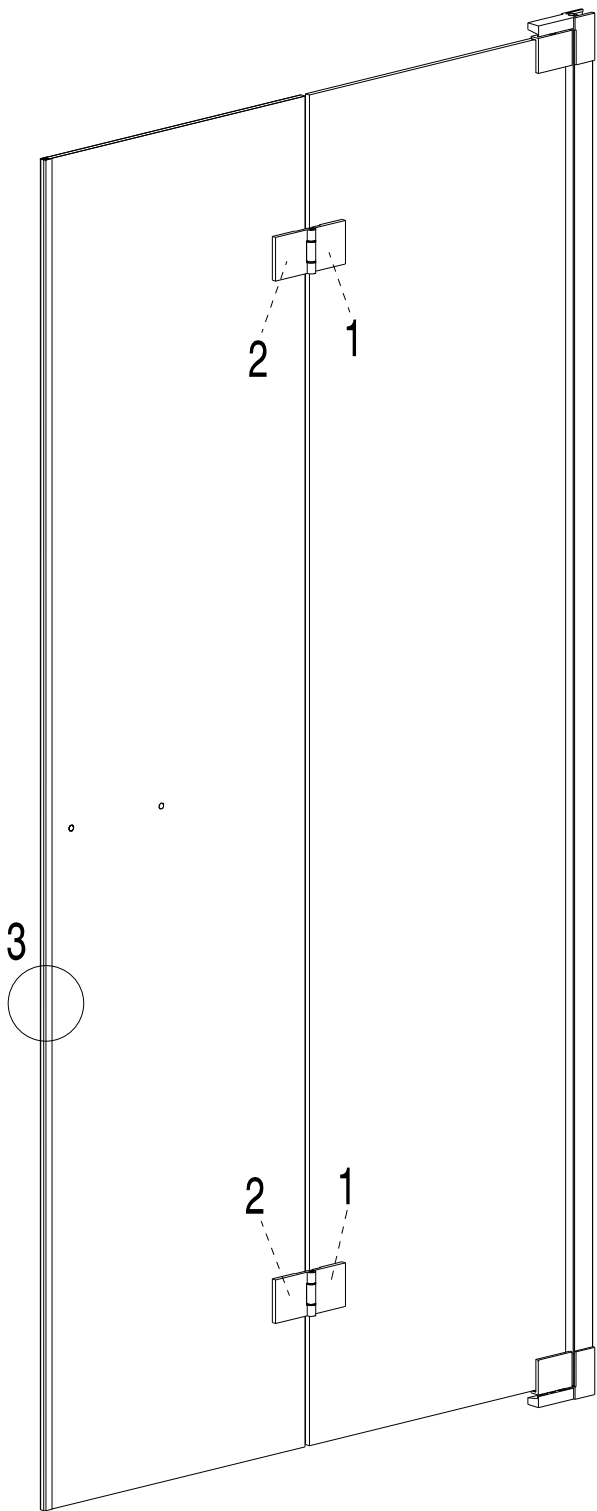

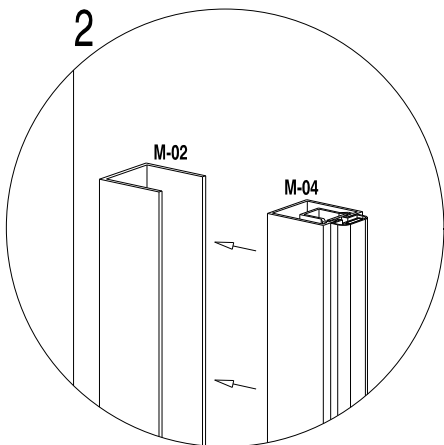
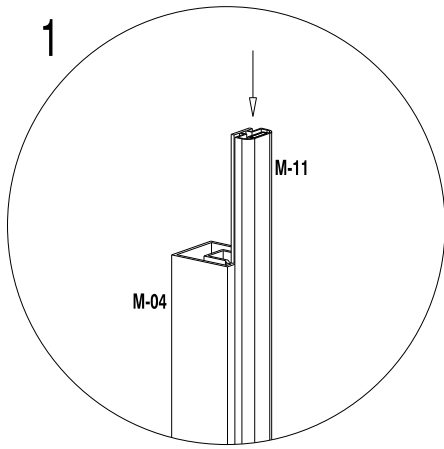
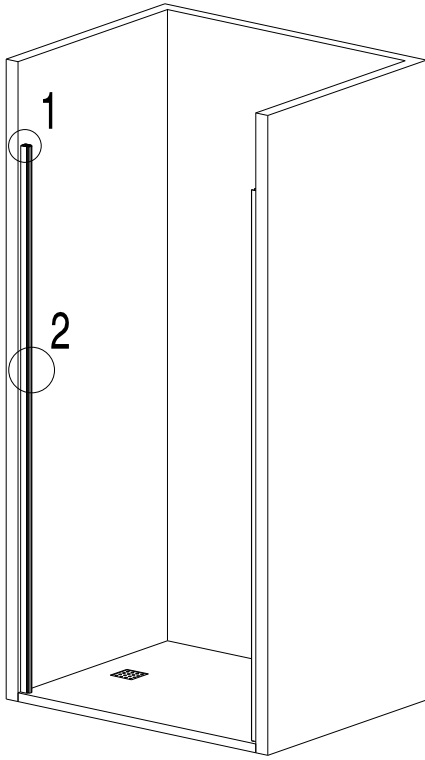
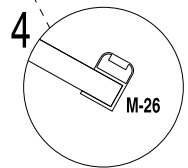
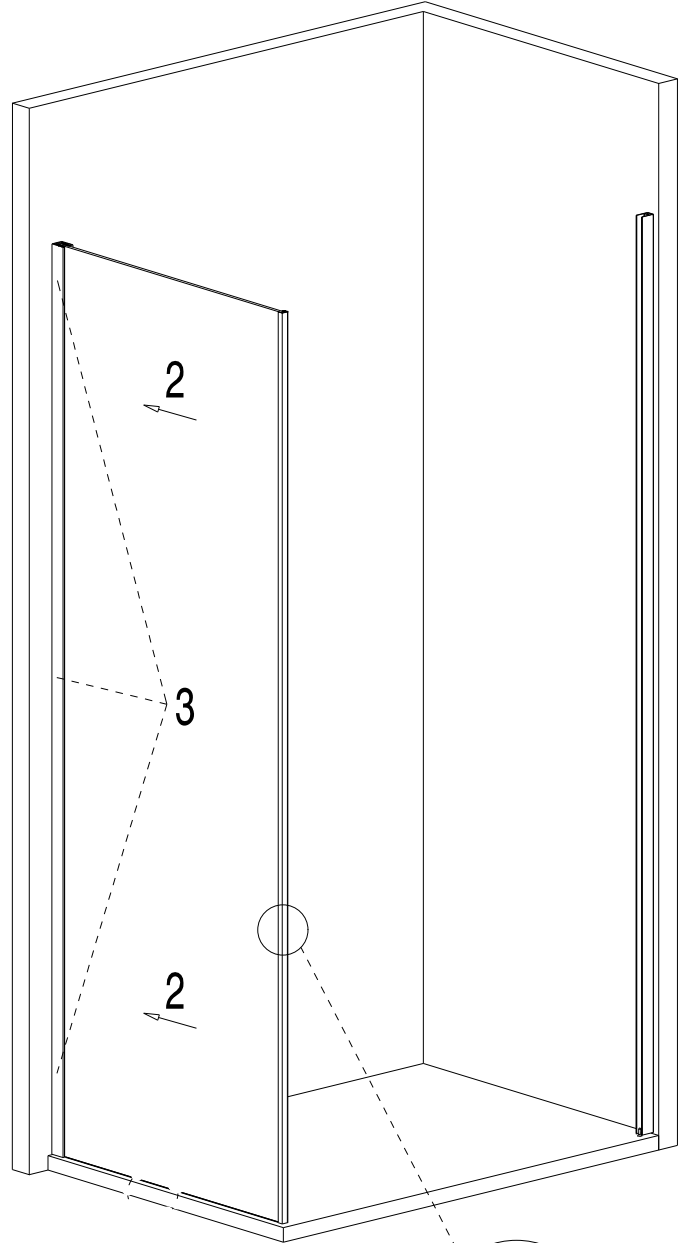
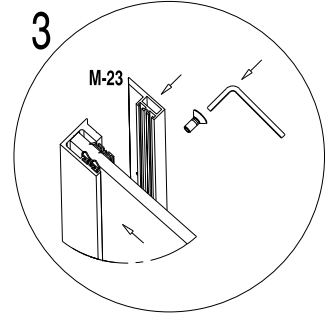
A**B**

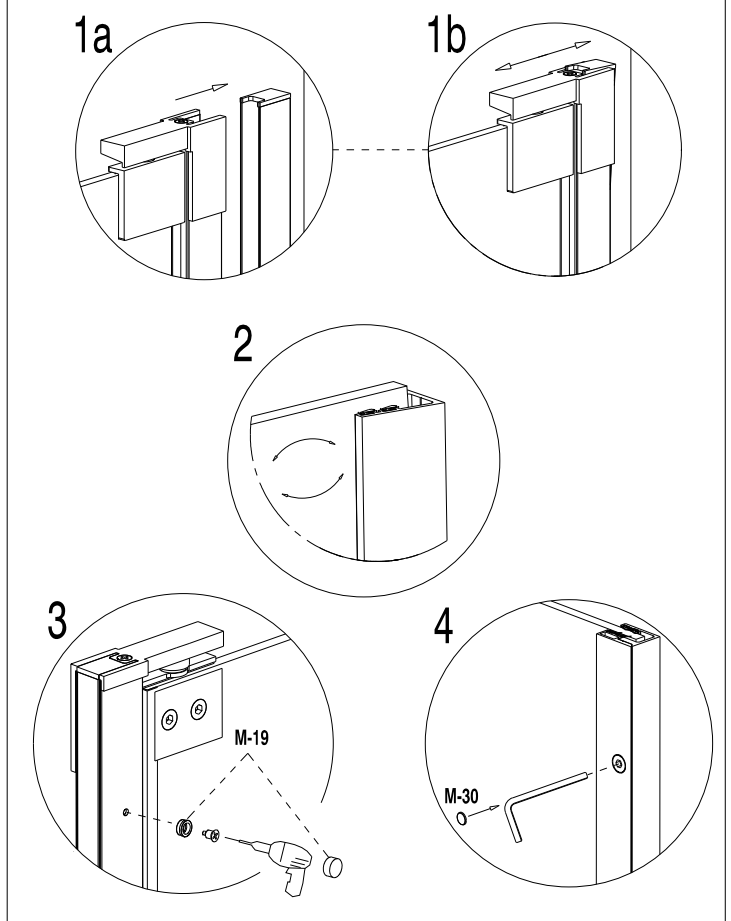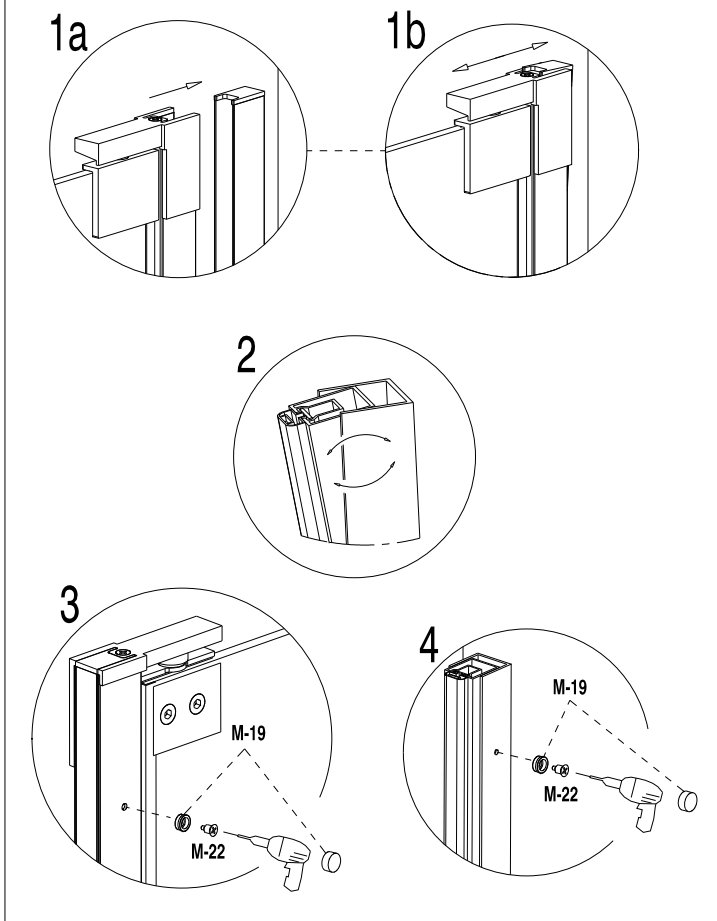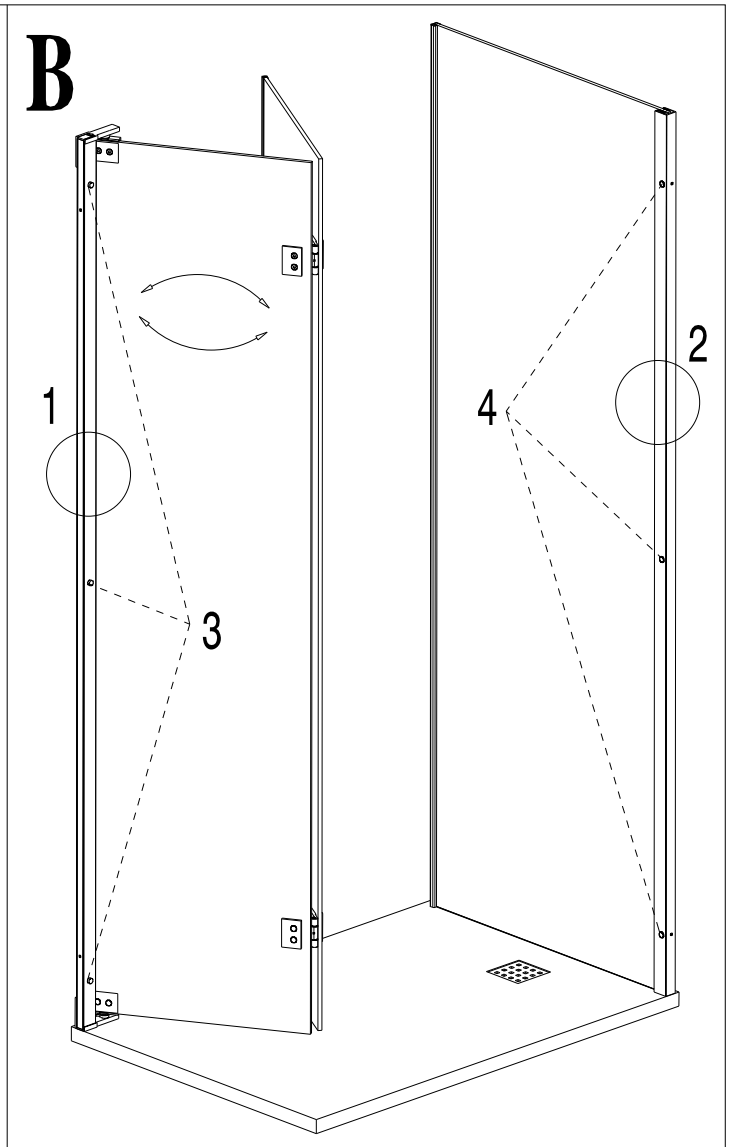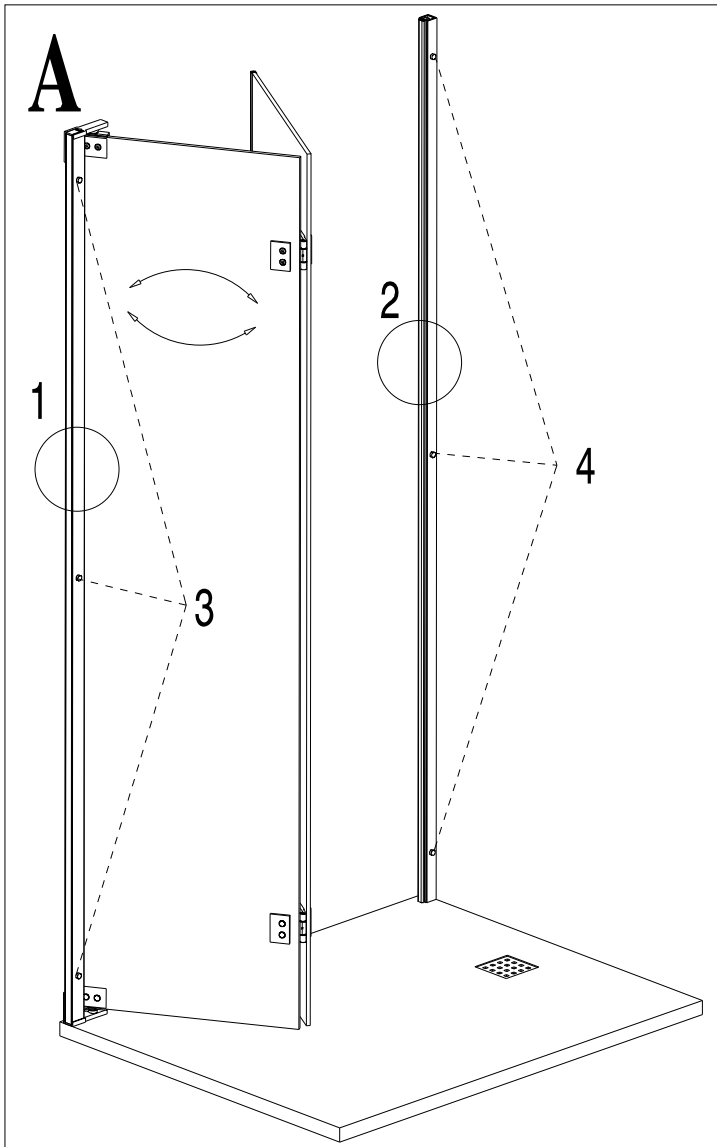

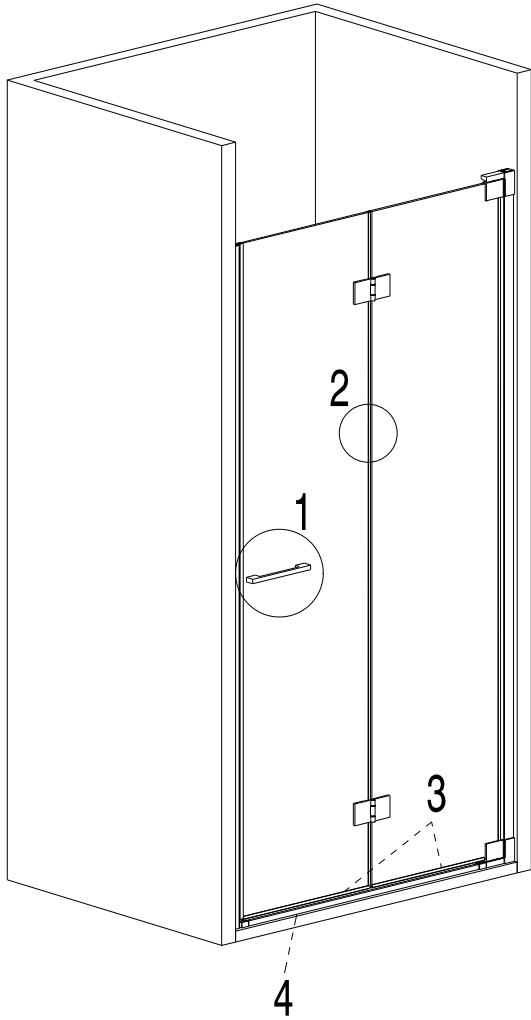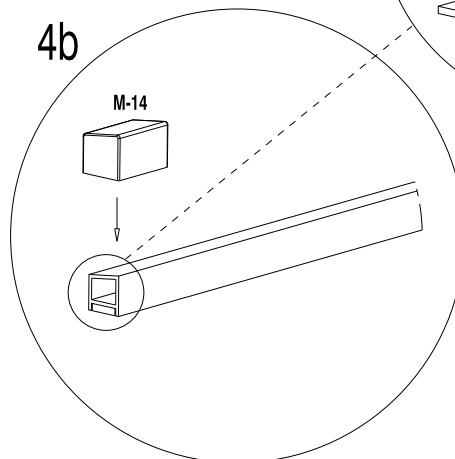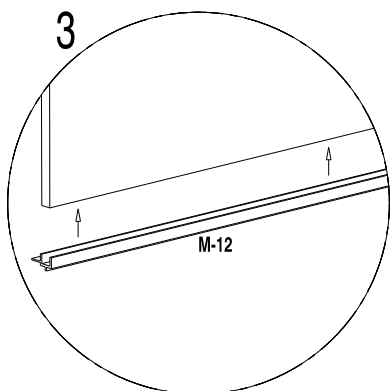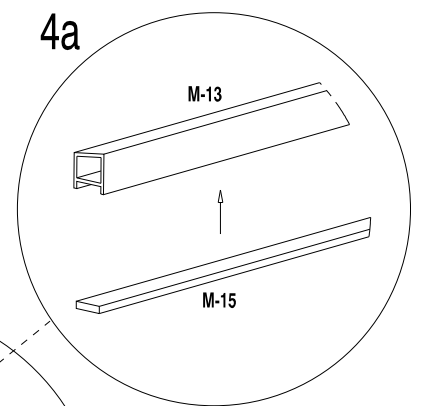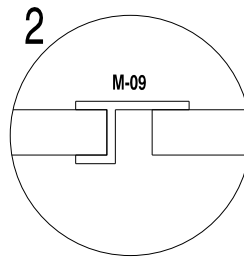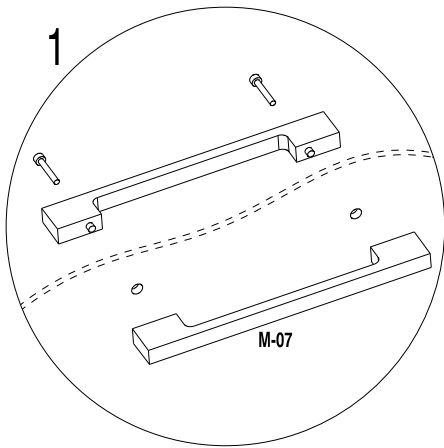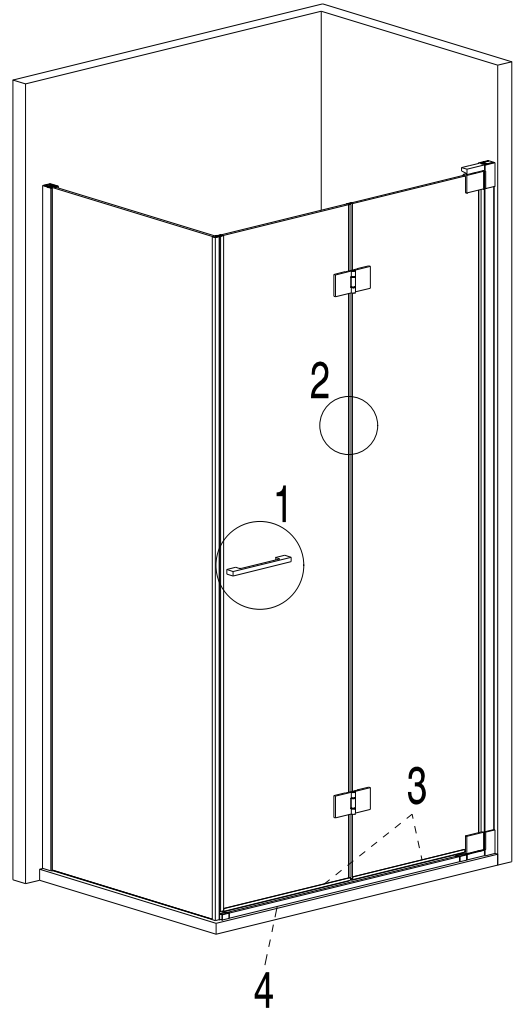A**B**




A

3a

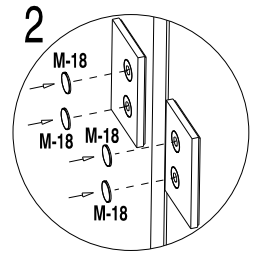
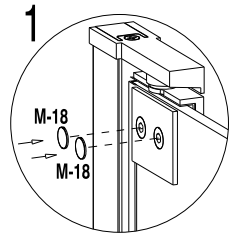
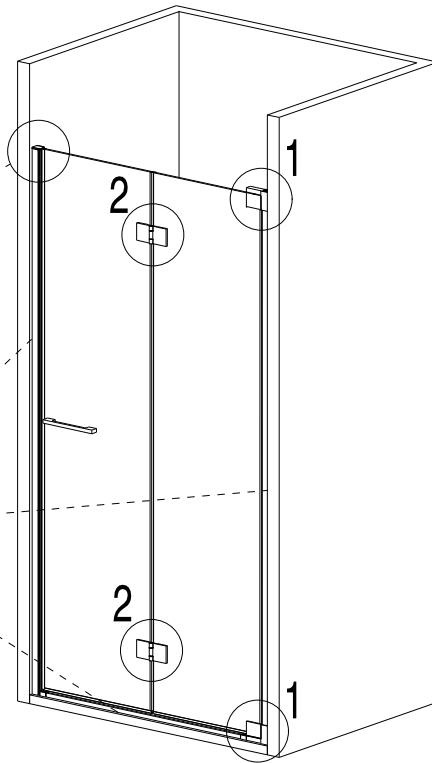

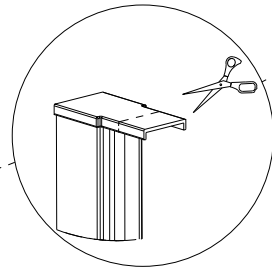
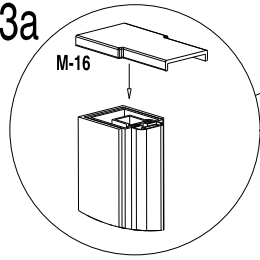


B

4

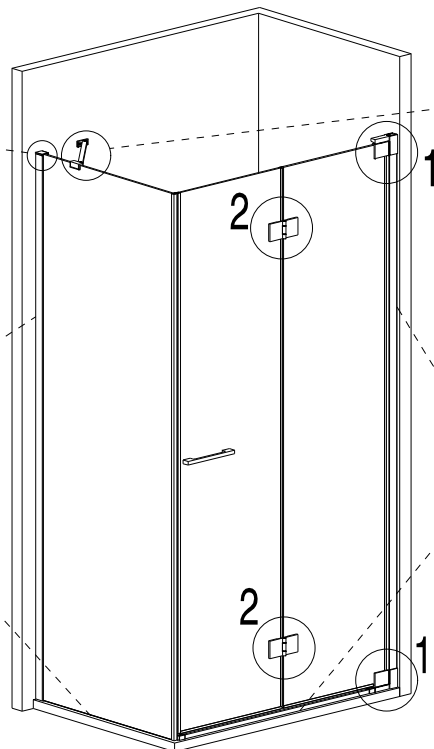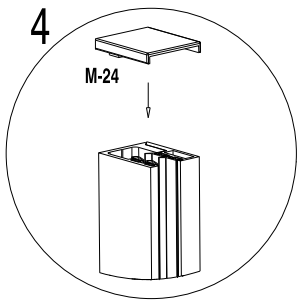

3

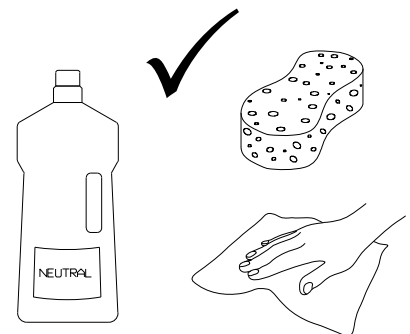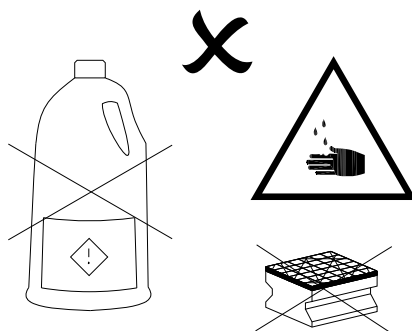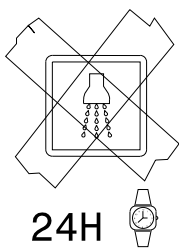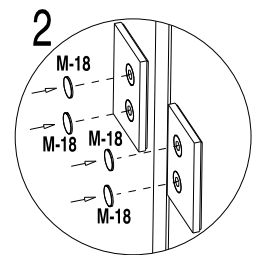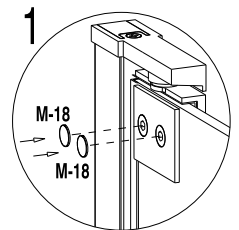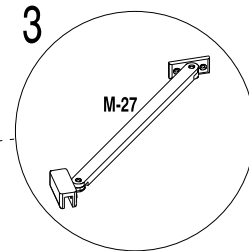



EUROPEAN SYSTEMS SERVICES
contact@expertbath.com



13

UNE-EN 14428

